BDL5530EL

www.philips.com/welcome

EN User manual

Cleaning and troubleshooting

PHILIPS

SAFETY AND TROUBLESHOOTING INFORMATION

Safety precautions and maintenance

WARNING: Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your display:

Operation:

- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Ensure the use of an approved power cord provided by Philips at all times. If your power cord is missing, please contact your local service center.
- Do not subject the display to severe vibration or high impact conditions during operation.
- Do not knock or drop the display during operation or transportation.

Maintenance:

- To protect your display from possible damage, do not put excessive pressure on the LCD panel. When moving your display, grasp the frame to lift; do not lift the display by placing your hand or fingers on the LCD panel.
- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water, and send the unit to the maintenance center.
- Do not store or use the display in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your display and ensure a longer lifetime, we strongly recommend using the display in a location that falls within the following temperature and humidity ranges.
    - Temperature: 0 ~ 40°C 32-104°F
    - Humidity: 20-80% RH

IMPORTANT: Always activate a moving screen saver program when you leave your display unattended. Always activate a periodic screen refresh application if the unit will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. This is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

WARNING: Severe "burn-in" or "after-image" or "ghost image" symptoms will not disappear and cannot be repaired. This is also not covered under the terms of your warranty.

Service:

- The casing cover should be opened only by qualified service personnel.
- If there is any need for repair or integration, please contact your local service center.
- Do not leave your display under direct sunlight.

If your display does not operate normally, having followed the instructions set out in this document, please contact a technician or your local service center.

Read and follow these instructions when connecting and using your display:

- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the display does not operate normally after having followed the instructions in this manual.
- The casing cover should be opened only by qualified service personnel.
- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When turning off the display by detaching the power cable or DC power cord, wait for 6 seconds before re-attaching the power cable or DC power cord for normal operation.
- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- IMPORTANT: Always activate a screen saver program during your application. If a still image in high contrast remains on the screen for an extended period of time, it may leave an "after-image" or "ghost image" on the front of the screen. This is a well-known phenomenon that is caused by the shortcomings inherent in the LCD technology. In most cases the afterimage will disappear gradually over a period of time after the power has been switched off. Be aware that after-image symptoms cannot be repaired and are not covered under warranty.

REGULATORY INFORMATION

CE DECLARATION OF CONFORMITY

MMD declares under our responsibility that the product is in conformity with the following standards

- EN60950-1:2006+A11:2009 (Safety requirement of Information Technology Equipment)
- EN55022:2006+A1:2007 (Radio Disturbance requirement of Information Technology Equipment)
- EN55024:1998+A1:2001+A2:2003 (Immunity requirement of Information Technology Equipment)
- EN61000-3-2:2006 (Limits for Harmonic Current Emission)
- EN61000-3-3:1995+A1:2001+A2:2005 (Limitation of Voltage Fluctuation and Flicker)
- EN55013:2001+A1:2003 +A2:2006 (Limits and Methods of Measurement of Radio Disturbance Characteristics of Broadcast Receivers and Associated Equipment)
- EN55020:2007 (Electromagnetic Immunity of Broadcast Receivers and Associated Equipment)

following provisions of directives applicable

- 2006/95/EC (Low Voltage Directive)
- 2004/108/EC (EMC Directive)
- 93/68/EEC (Amendment of EMC and Low Voltage Directive) and is produced by a manufacturing organization on ISO9000 level.

FEDERAL COMMUNICATIONS COMMISSION (FCC) NOTICE (U.S. Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the users' authority to operate the equipment.

Use only RF shielded cable that was supplied with the display when connecting this unit to a computer device. To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

FCC DECLARATION OF CONFORMITY

Trade Name: Philips

Declaration of Conformity for Products Marked with FCC Logo, United States Only: This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

POLISH CENTER FOR TESTING AND CERTIFICATION NOTICE

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computers, monitors, printers and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 Amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę kabla zasilającego z gniazdka, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-89/E-06251.

Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceniowego źródła zasilania.
- Należy upewnić się, aby nic nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia luźnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.

ELECTRIC, MAGNETIC AND ELECTRONMAGNETIC FIELDS ("EMF")

1. MMD manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
2. One of MMD's leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. MMD is committed to developing, producing and marketing products that cause no adverse health effects.
4. MMD confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. MMD plays an active role in the development of international EMF and safety standards, enabling MMD to anticipate further developments in standardization for early integration in its products.

INFORMATION FOR UK ONLY

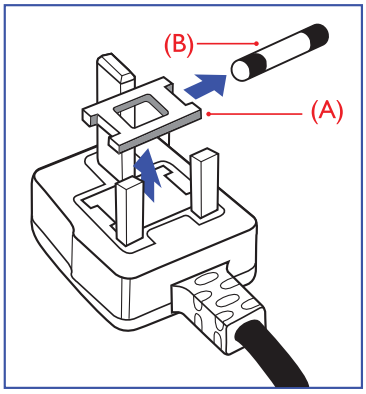

WARNING - THIS APPLIANCE MUST BE EARTHED.

Important:

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fit new fuse which should be a BS 1362 5A, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Note: Any severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

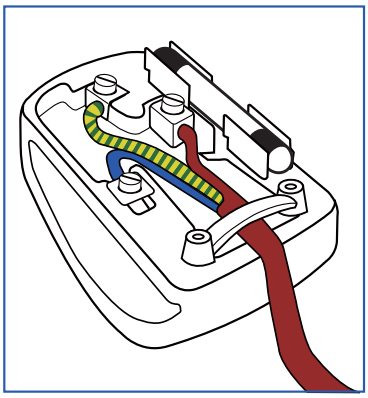

How to connect a plug

The wires in the mains lead are colored in accordance with the following code:

BLUE - "NEUTRAL" ("N")

BROWN - "LIVE" ("L")

GREEN & YELLOW - "EARTH" ('E")

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or ⏚ coloured GREEN or GREEN AND YELLOW.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
3. The BROWN wire must be connected to the terminal which marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the three wires.

中国电子信息产品污染控制表示要求 (中国 RoHS 法规标示要求) 产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 ($Cr\ 6^{+}$)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	O	O	O	O	O	O
液晶面板	X	X	O	O	O	O
电路板组件	X	O	O	O	O	O
附件 (遥控器，电源线，连接线)	X	O	O	O	O	O
遥控器电池	X	O	O	O	O	O

O：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

环保使用期限

此标识指期限 (十年)，电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

《废弃电器电子产品回收处理管理条例》提示性说明

为了更好地关爱及保护地球，当用户不再需要此产品或产品寿命终止时，请遵守国家废弃电器电子产品回收处理相关法律法规，将其交给当地具有国家认可的回收处理资质的厂商进行回收处理。

NORTH EUROPE (NORDIC COUNTRIES) INFORMATION

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

END-OF-LIFE DISPOSAL

Your display contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

Please find out about the local regulations on how to dispose of your old display from your local Philips dealer.

(For customers in Canada and U.S.A.)

This product may contain lead and/or mercury. Dispose of in accordance to local state and federal regulations. For additional information on recycling contact www.eia.org (Consumer Education Initiative)

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT-WEEE

Attention users in European Union: private households

This marking on the product or on its packaging illustrates, under European Directive 2002/96/EG governing used electrical and electronic appliances, that this product may not be disposed of with normal household waste. You are responsible for the disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such electrical and electronic waste, contact your local government office or the waste disposal organization that serves your household area.

Attention users in United States:

Like all LCD products, this set contains a lamp with Mercury. Please dispose of according to all Local, State and Federal Laws. For the disposal or recycling information, contact: www.mygreenelectronics.com or www.eiae.org.

END OF LIFE DIRECTIVES - RECYCLING

Your display contains several materials that can be recycled for new uses.

Like all LCD products, this set contains a lamp with Mercury, please dispose of according to all local State and Federal laws.

As an ENERGY STAR® Partner, MMD has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

TABLE OF CONTENTS

1. UNPACKING AND INSTALLATION
   - 1.1. UNPACKING
   - 1.2. PACKAGE CONTENTS
   - 1.3. INSTALLATION NOTES
   - 1.4. PORTRAIT MOUNTING

2. PARTS AND FUNCTIONS
   - 2.1. FRONT VIEW
   - 2.2. REAR VIEW
   - 2.3. INPUT/OUTPUT TERMINALS
   - 2.4. REMOTE CONTROL
     - 2.4.1. GENERAL FUNCTIONS
     - 2.4.2. INSERTING THE BATTERIES IN THE REMOTE CONTROL
     - 2.4.3. OPERATING RANGE OF THE REMOTE CONTROL

3. CONNECTIONS TO EXTERNAL EQUIPMENT
   - 3.1. USING THE CABLE RETAINER
   - 3.2. CONNECTING EXTERNAL EQUIPMENT (DVD/VCR/VCD)
     - 3.2.1. USING COMPONENT VIDEO INPUT
     - 3.2.2. USING S-VIDEO INPUT
     - 3.2.3. USING VIDEO INPUT
     - 3.2.4. USING HDMI INPUT
   - 3.3. CONNECTING A PC
     - 3.3.1. USING VGA INPUT
     - 3.3.2. USING DVI INPUT
     - 3.3.3. USING HDMI INPUT
   - 3.4. EXTERNAL AUDIO CONNECTION
     - 3.4.1. CONNECTING EXTERNAL SPEAKERS
     - 3.4.2. CONNECTING EXTERNAL AUDIO DEVICE
   - 3.5. CONNECTING ANOTHER BDL5530EL DISPLAY

4. OSD MENU
   - 4.1. NAVIGATING THE OSD MENU
     - 4.1.1. NAVIGATING THE OSD MENU USING THE REMOTE CONTROL
     - 4.1.2. NAVIGATING THE OSD MENU USING THE DISPLAY'S CONTROL BUTTONS
   - 4.2. OSD MENU OVERVIEW
     - 4.2.1. PICTURE MENU
     - 4.2.2. SCREEN MENU
     - 4.2.3. AUDIO MENU
     - 4.2.4. PIP MENU
     - 4.2.5. CONFIGURATION 1 MENU
     - 4.2.6. CONFIGURATION 2 MENU
     - 4.2.7. ADVANCED MENU

5. INPUT MODE

6. PIXEL DEFECT POLICY
   - 6.1. PIXELS AND SUB-PIXELS
   - 6.2. TYPES OF PIXEL DEFECTS + DOT DEFINITION
   - 6.3. BRIGHT DOT DEFECTS

6.4. DARK DOT DEFECTS
6.5. PROXIMITY OF PIXEL DEFECTS
6.6. PIXEL DEFECT TOLERANCES

7. CLEANING AND TROUBLESHOOTING
7.1. CLEANING
7.2. TROUBLESHOOTING

8. TECHNICAL SPECIFICATIONS

2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trade marks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V.

Specifications are subject to change without notice.

1. UNPACKING AND INSTALLATION

1.1. UNPACKING

- This product is packed in a carton, together with the standard accessories.
- Any other optional accessories will be packed separately.
- Due to the size and weight of this display it is recommended for two people to move it.
- The protective glass and glass substrate are installed on the front of the product. Since glass can be both broken and scratched easily, the product should be handled with care. Never place the product with the glass faced down unless with proper protection and padding.

1.2. PACKAGE CONTENTS

Verify that you received the following items with your package content:

1


2

3

4

5

6

7

1. LCD display
2. Remote control with batteries
3. CD-ROM (EDFU and SICP)
4. Quick Start Guide
5. Cable retainer (x 3)
6. Power cords
7. VGA cable

- For regions not covered by our standard power plugs, apply a power cord that conforms to the AC voltage of the power socket and has been approved by and complies with the safety regulations of the particular country.
- The package box and material can be saved for any event where the unit needs to be shipped to another location.
- External speakers and table stands are offered as optional extras, and are not included with your display.

1.3. INSTALLATION NOTES

- Due to the high power consumption of the display, always use the plug exclusively designed for this product. If an extended line is required, please consult your service agent.
- The product should be installed on a flat surface to avoid tipping. Maintain a distance of at least 6cm between the back of the display and the wall for proper ventilation. Avoid installing the unit in a kitchen, bathroom or any other place with high humidity so as not to shorten the service life of the electronic components.
- Do not place this product on the floor and keep away from children.
- The product can normally operate only under 4000m in altitude. In installations at altitudes above 4000m, some abnormalities may be experienced.

RETURN TO THE CONTENTS

1.4. PORTRAIT MOUNTING

Wall mounting holes

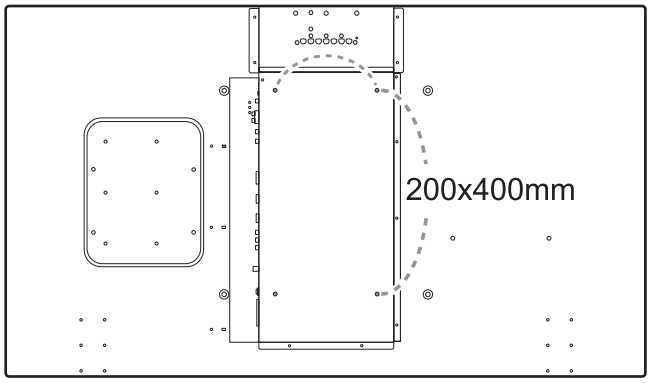

Notes:

- *M6 (10mm) screws (with a length 10-15mm longer than the thickness of the mounting bracket) are needed for wall mounting (not included). Tighten the screws securely (recommended torque: 470 - 635N•cm)*
- *The mounting interface should comply with the UL1678 standard in North America. The mounting means should be strong enough to bear the weight of the display (approx. 29 kg (63.9 lb) without stands).*

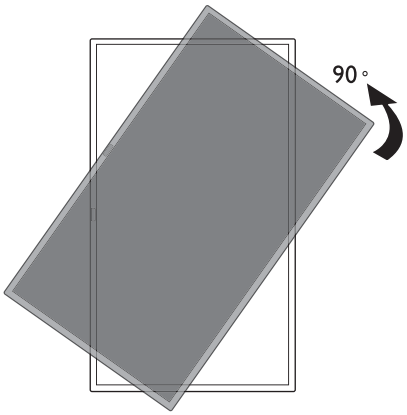

Note: The remote control sensor should be on the left side when rotating your display.

Allowable tilting angle in Portrait Mode

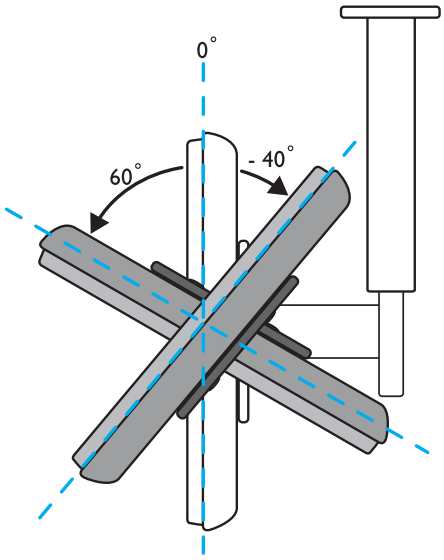

Note: When installing the display on the wall, please consult a professional technician for proper installation. The manufacturer accepts no liability for installations not performed by a professional technician.

RETURN TO THE CONTENTS

2. PARTS AND FUNCTIONS

2.1. FRONT VIEW

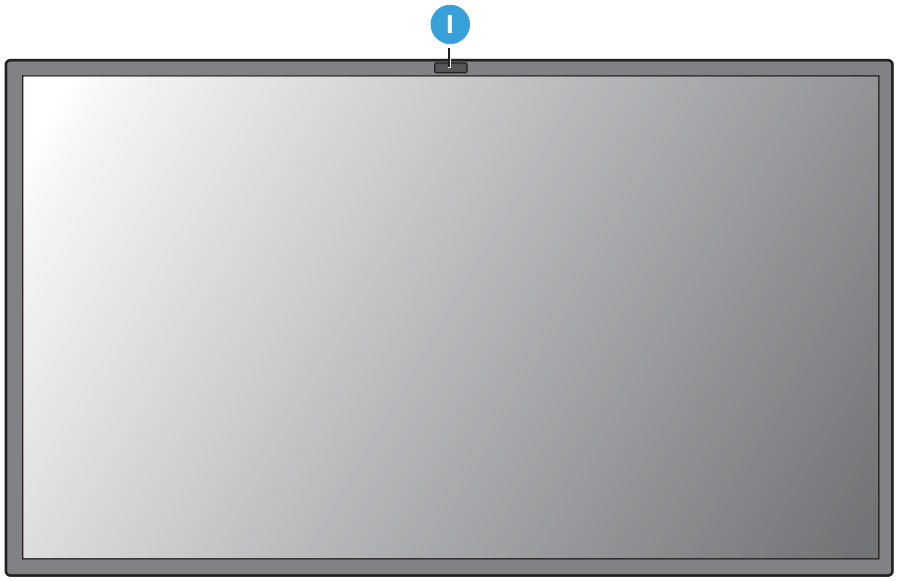

1. Remote control sensor, ambient light sensor and power indicator

- Receives command signals from the remote control.
- Detects the ambient lighting conditions around the display.
- Indicates the operating status of the unit:
  - lights green when the display is turned on
  - lights red when the display is in standby mode
  - blinks green when remote control signal is received
  - blinks red when the display enters DPMS mode
  - off when the main power of the display is turned off

RETURN TO THE CONTENTS

2.2. REAR VIEW

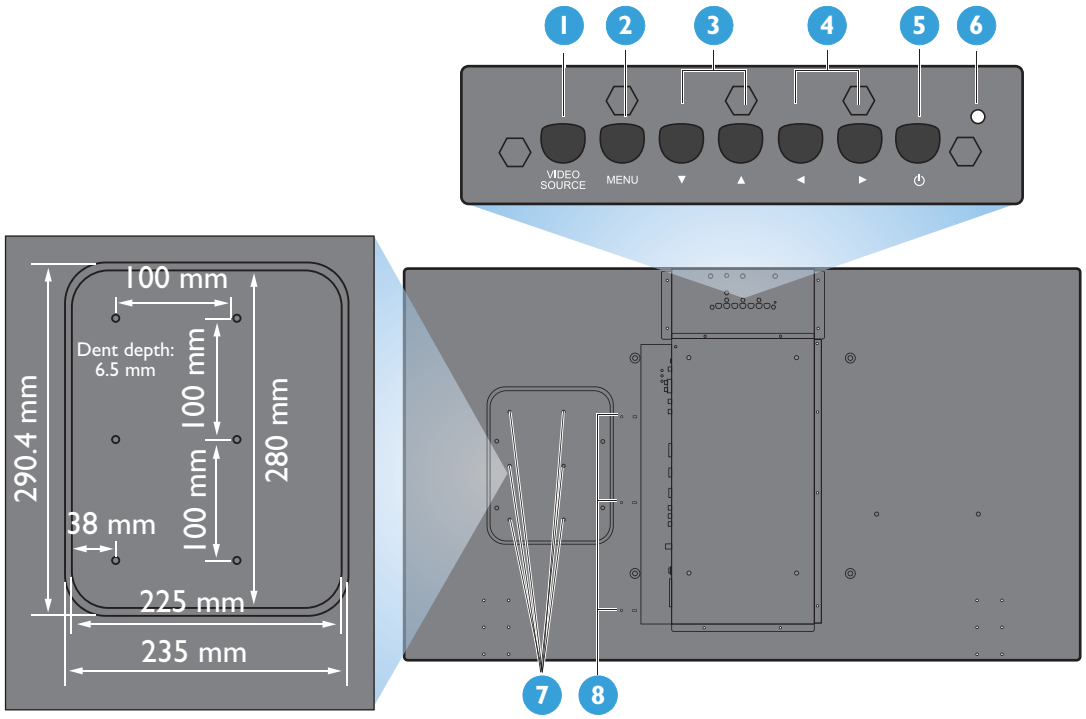

1. VIDEO SOURCE button

- Use this button to select the input source.
- When the On Screen Display menu is active, this is also used as the **SET** button.

2. MENU button

- Use this button to engage the On Screen Display menu.
- When the On Screen Display menu is active, use this button to return to the previous menu.

3. ▲/▼ button

- When the On Screen Display menu is active, use these as the **UP/DOWN** menu buttons.
- Press and hold the ▲ and ▼ buttons simultaneously for 3 seconds to lock or unlock all buttons.

4. ◀ / ▶ button

- When the On Screen Display menu is active, use these as the **PLUS/MINUS** menu buttons.

5. POWER button

Use this button to turn the display on or into standby mode.

6. Power indicator

Indicates the operating status of the unit:

- lights green when the display is turned on
- lights red when the display is in standby mode
- blinks red when the display enters DPMS mode
- off when the main power of the display is turned off

7. Smart Insert installation holes

Location for the Smart Insert (for integration of a small form factor PC) and M4 screws. (Maximum load: 2kg)

8. Cable retainer installation holes

Install the cable retainer using these holes.

RETURN TO THE CONTENTS

2.3. INPUT/OUTPUT TERMINALS

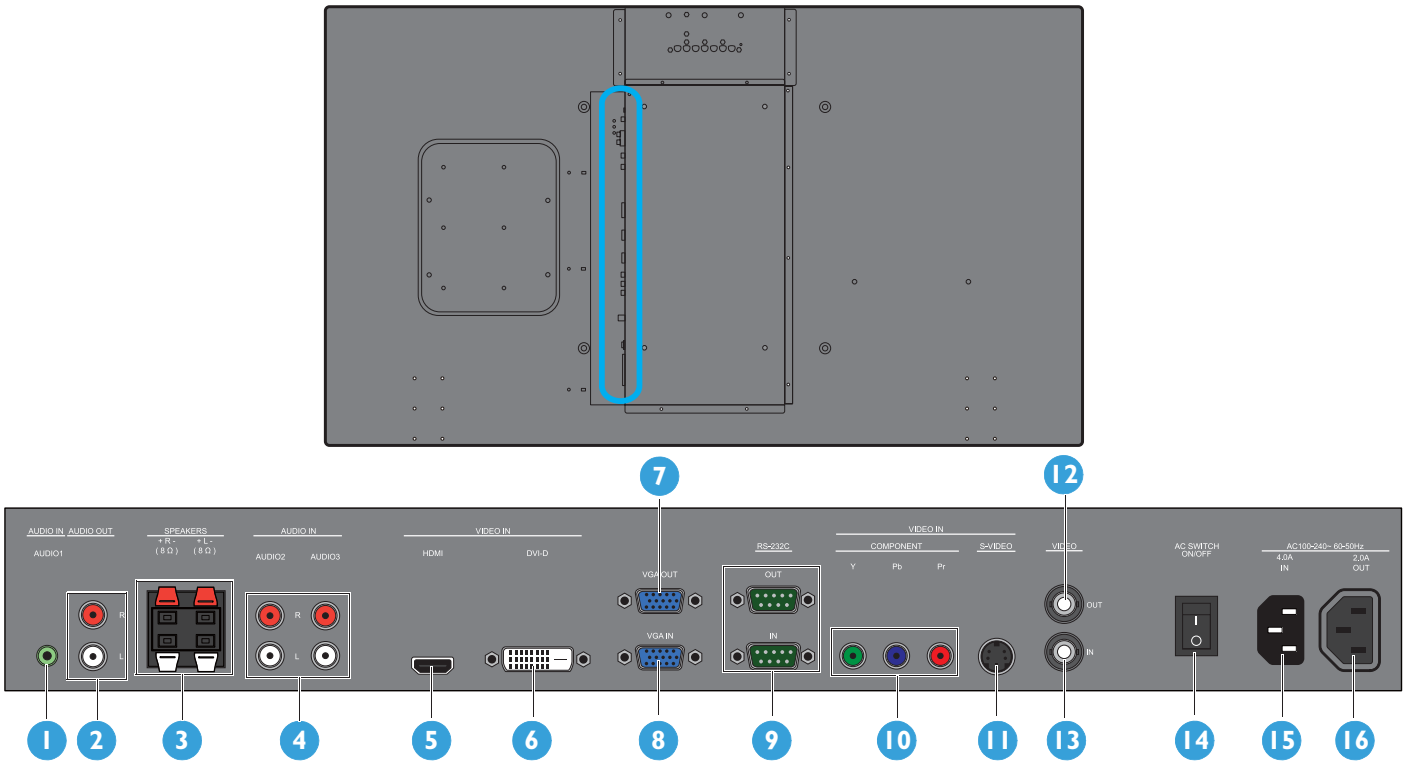

1. AUDIO IN (AUDIO1)
Connects to the audio output of a computer.

2. AUDIO OUT R/L
Outputs the audio signal from the **AUDIO IN** (**AUDIO1**/**AUDIO2**/**AUDIO3**) or **HDMI** jack.

3. SPEAKERS R/L
Outputs the audio signal from the **AUDIO IN** (**AUDIO1**/**AUDIO2**/**AUDIO3**) or **HDMI** jack to external speakers.

4. AUDIO IN (AUDIO2/AUDIO3)
Connects to the audio output of an AV device.

5. VIDEO IN (HDMI)
Connects to the HDMI output of an AV device or to the DVI-D output of a PC. (Using a DVI-HDMI cable)

6. VIDEO IN (DVI-D)
Connects to the DVI-D output of a PC or to the HDMI output of an AV device (Using a DVI-HDMI cable).

7. VGA OUT
Outputs the VGA signal from the **VGA IN** jack.

8. VGA IN
Connects to the VGA output of a computer.

9. RS-232C (OUT/IN)
RS232C network connection input/output for the use of loop through function.

10. VIDEO IN (COMPONENT)
Component video input (YPbPr) for connecting to the component output of an AV device.

11. VIDEO IN (S-VIDEO)
S-Video input for connecting to the S-Video output of an AV device.

12. VIDEO OUT
Connects to the video input of an AV device or another BDL5530EL unit.

13. VIDEO IN
Connects to the video output of an AV device or another BDL5530EL unit.

14. Main power switch
Press to switch the main power on/off.

15. AC IN (4.0 A)
Connects the supplied power cord to the wall outlet.

16. AC OUT (2.0 A)
Can be used to power an external media device.

RETURN TO THE CONTENTS

2.4. REMOTE CONTROL

2.4.1. GENERAL FUNCTIONS

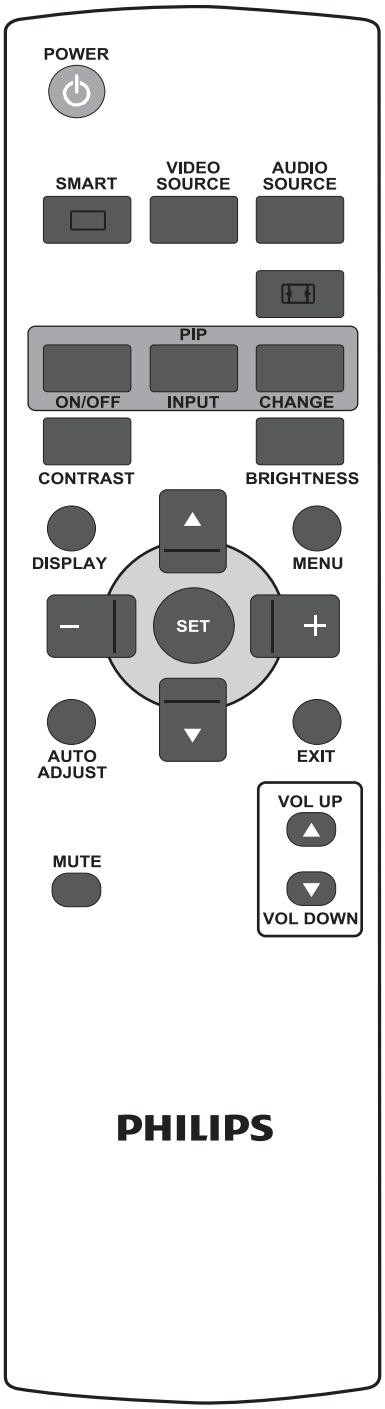

POWER

POWER button

Press to switch on the display from standby mode. Press again to turn it to standby mode.

SMART

SMART button

To select smart picture mode from:

- **Highbright**: for moving images such as Video
- **Standard**: for images (factory setting)
- **sRGB**: for text based images
- **Cinema**: for movies.
- **User**: create your own picture settings. This mode is automatically selected after you change the settings in the **Picture** menu.

VIDEO SOURCE

VIDEO SOURCE button

Press to open the video source selection menu and then press **UP**/**DOWN** to select from **HDMI**, **DVI-D**, **VGA**, **Component**, **S-Video**, and **Video**.

AUDIO SOURCE

AUDIO SOURCE button

Press to open the audio source selection menu and then press **UP**/**DOWN** to select from **HDMI**, **Audio 1**, **Audio 2**, and **Audio 3**.

Picture format button

To switch screen aspect ratio between **Full**, **Normal**, **Dynamic**, **Custom**, **Real**, and **21:9**.

PIP (Picture In Picture) buttons

- ON/OFF **ON/OFF** button: To turn PIP mode on/off.
- INPUT **INPUT** button: To select the input signal for the sub-picture.
- CHANGE **CHANGE** button: To toggle between the main picture and sub picture.

Note: "PIP" mode does not work if the screen size is set to "Custom", "Dynamic", "Real" or "21:9".

CONTRAST

CONTRAST button

Press to open the **Contrast** OSD selection, and then press the **PLUS** or **MINUS** button to adjust the value.

BRIGHTNESS

BRIGHTNESS button

Press to open the **Brightness** OSD selection, and then press the **PLUS** or **MINUS** button to adjust the value.

RETURN TO THE CONTENTS

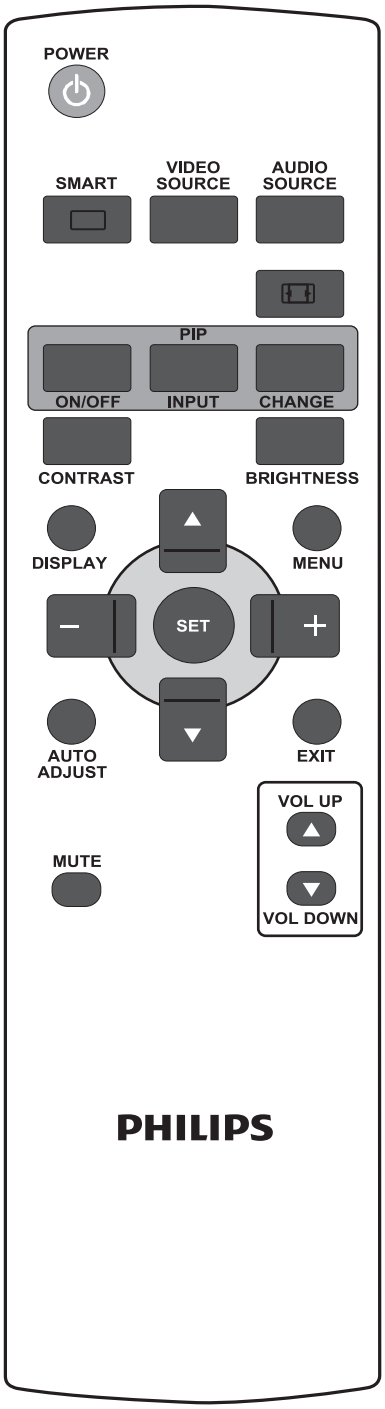

DISPLAY button

To turn on/off the setting information displayed on the upper right corner of the screen.

MENU button

To turn the OSD menu on/off.

UP button

- To move the highlight bar up to adjust the selected item when OSD menu is on.
- To move the sub-picture up in "PIP" mode.

DOWN button

- To move the highlight bar down to adjust the selected item when OSD menu is on.
- To move the sub-picture down in "PIP" mode.

PLUS button

- To increase the adjustment with OSD menu.
- To move the sub-picture right in "PIP" mode.

MINUS button

- To decrease the adjustment with OSD menu.
- To move the sub-picture left in "PIP" mode.

SET button

To activate the changed settings inside OSD menu.

AUTO ADJUST button

Note: For VGA input only.

To execute the **Auto adjust** function.

EXIT button

To turn to the previous OSD menu.

MUTE button

To turn the mute function on/off.

VOL UP button

To increase the audio output level.

VOL DOWN button

To decrease the audio output level.

RETURN TO THE CONTENTS

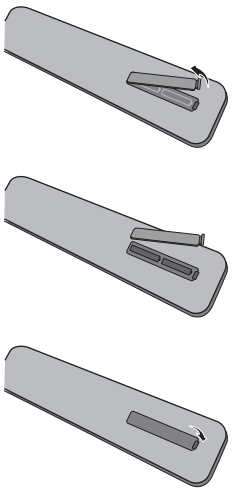

2.4.2. INSERTING THE BATTERIES IN THE REMOTE CONTROL

1. Remove the cover on the rear of the remote control.
2. Insert two AAA size 1.5V batteries ensuring that the "+" and "-" ends of the batteries are correctly aligned.
3. Replace the cover.

Note: Do not mix battery types, e.g. alkaline and manganese.

2.4.3. OPERATING RANGE OF THE REMOTE CONTROL

When pressing a remote control button, point the top of the remote control towards the remote control sensor.

Use the remote control within a distance of about 10m/32ft from the display's remote control sensor and within a horizontal and vertical angle of 45 degrees.

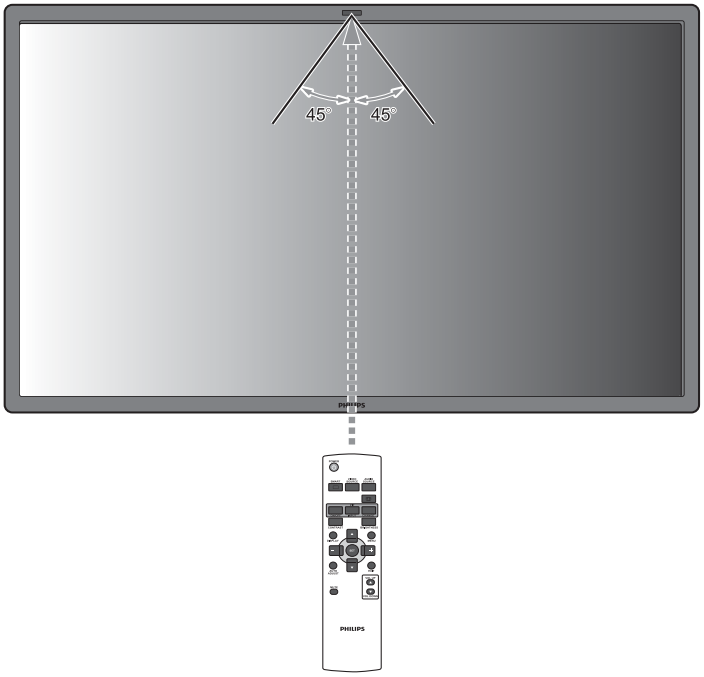

Note: The remote control may not function properly if the remote control sensor on the display is under direct sunlight, in a location with strong illumination, or if there is an obstacle in the path of signal transmission.

RETURN TO THE CONTENTS

3. CONNECTIONS TO EXTERNAL EQUIPMENT

3.1. USING THE CABLE RETAINER

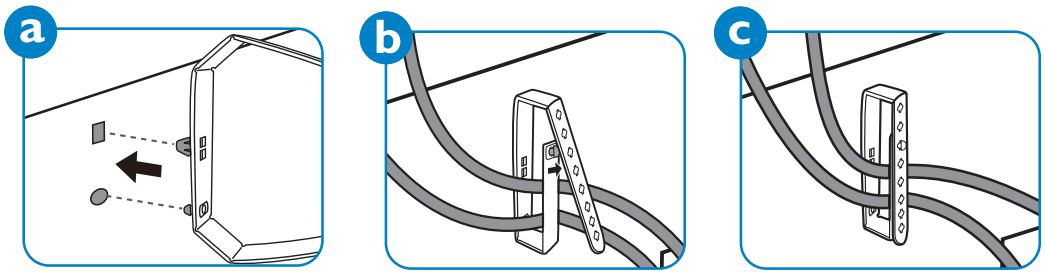

3.2. CONNECTING EXTERNAL EQUIPMENT (DVD/VCR/VCD)

3.2.1. USING COMPONENT VIDEO INPUT

1. Connect the green-colored (labeled as "Y") jack of the device to the green-colored "Y" jack of the display.
2. Connect the blue-colored (labeled as "Pb") jack of the device to the blue-colored "Pb" jack of the display.
3. Connect the red-colored (labeled as "Pr") jack of the device to the red-colored "Pr" jack of the display.
4. Connect the red (R) and white (L) audio jacks of the device to the AUDIO IN (AUDIO2 or AUDIO3) jacks of the display.

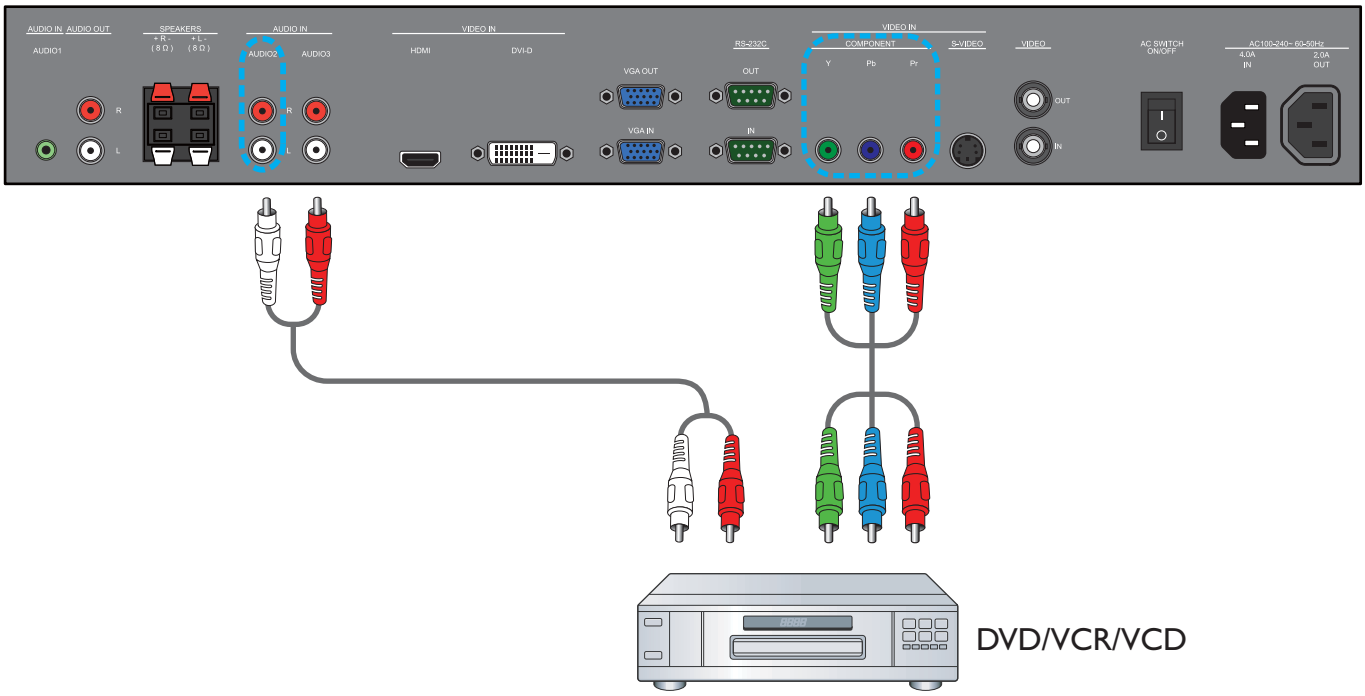

RETURN TO THE CONTENTS

3.2.2. USING S-VIDEO INPUT

1. Connect the S-Video connector of the external device to the S-VIDEO input of the display.
2. Connect the red (R) and white (L) audio jacks of the device to the AUDIO IN (AUDIO2 or AUDIO3) jacks of the display.

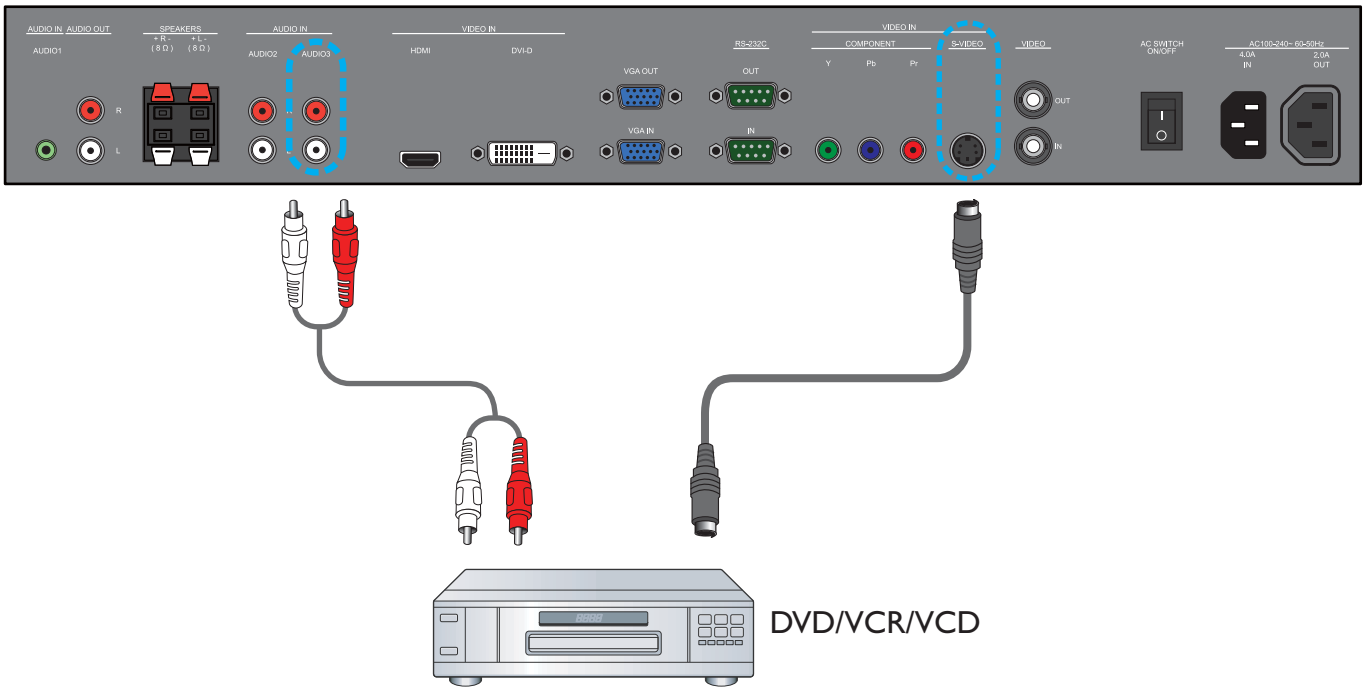

3.2.3. USING VIDEO INPUT

1. Connect the Video connector of the external device to the VIDEO IN input of the display.
2. Connect the red (R) and white (L) audio jacks of the device to the AUDIO IN (AUDIO2 or AUDIO3) jacks of the display.

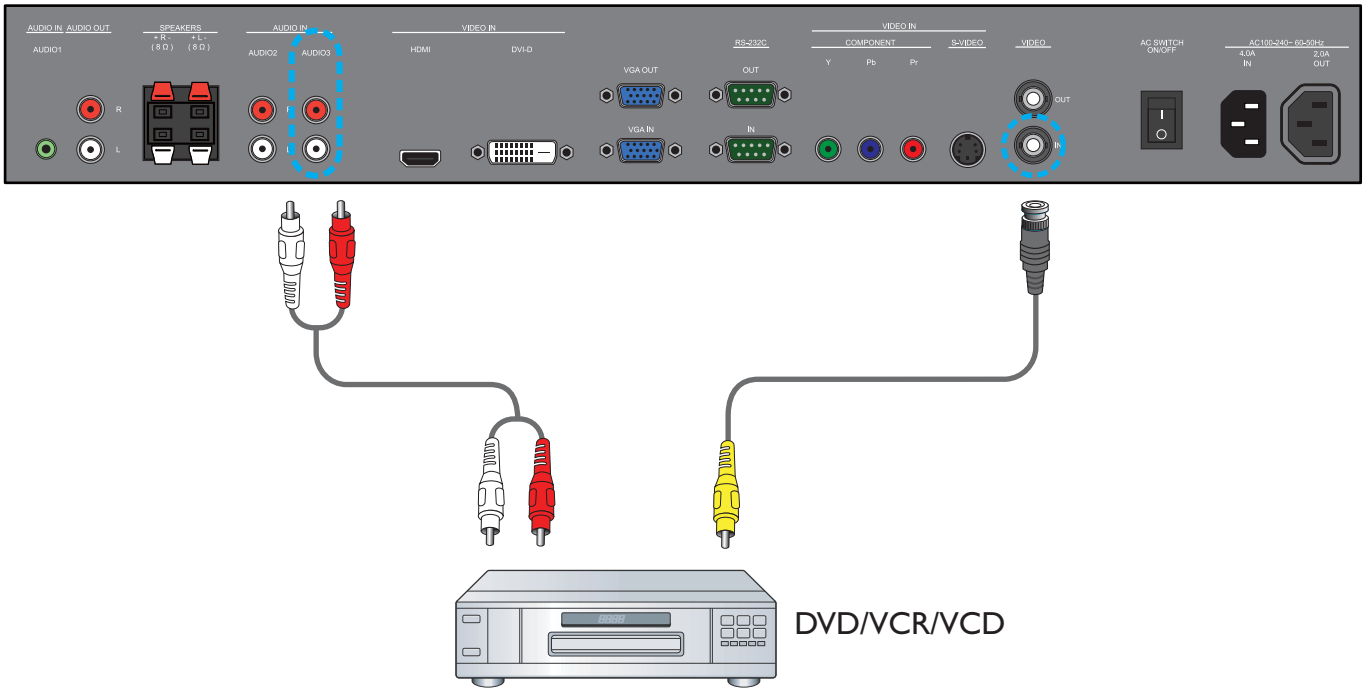

RETURN TO THE CONTENTS

3.2.4. USING HDMI INPUT

Connect the HDMI connector of the external device to the HDMI input of the display.

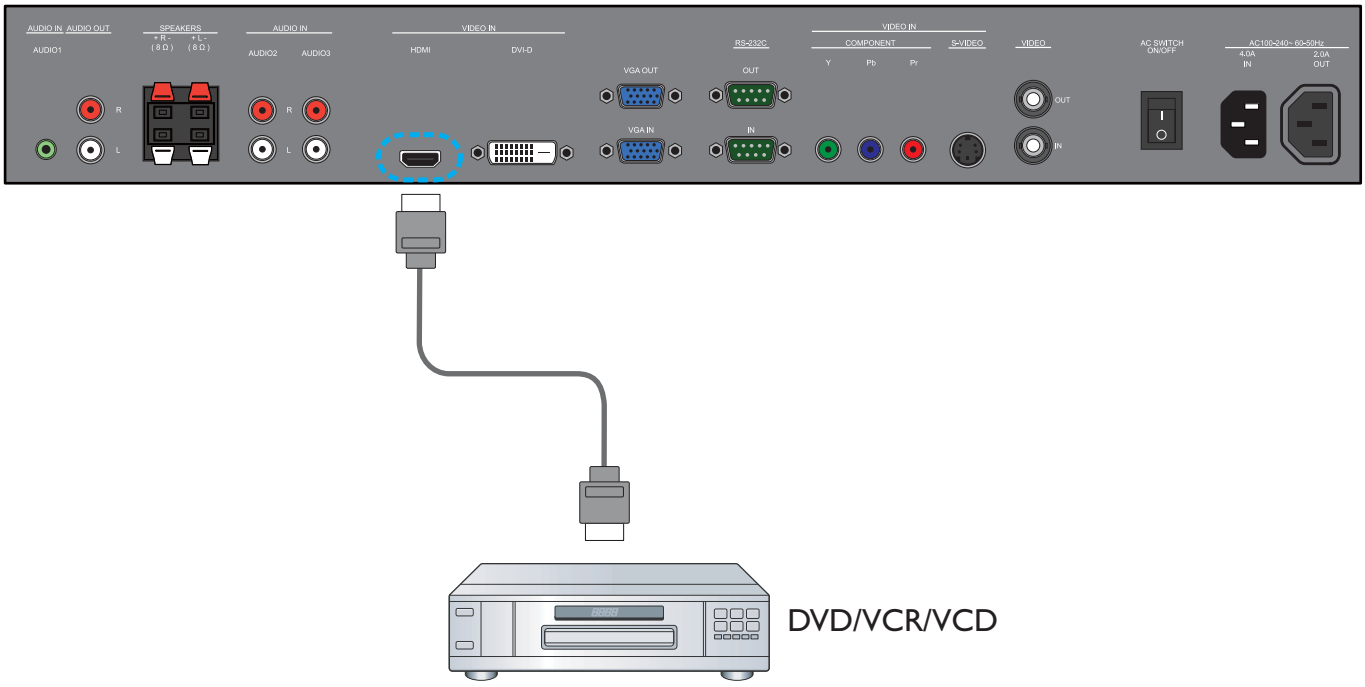

3.3. CONNECTING A PC

3.3.1. USING VGA INPUT

1. Connect the 15-pin VGA connector of the PC to the VGA IN connector of the display.
2. Insert the audio cable to the AUDIO IN (AUDIO1) input of the display and connect to the corresponding PC connector.

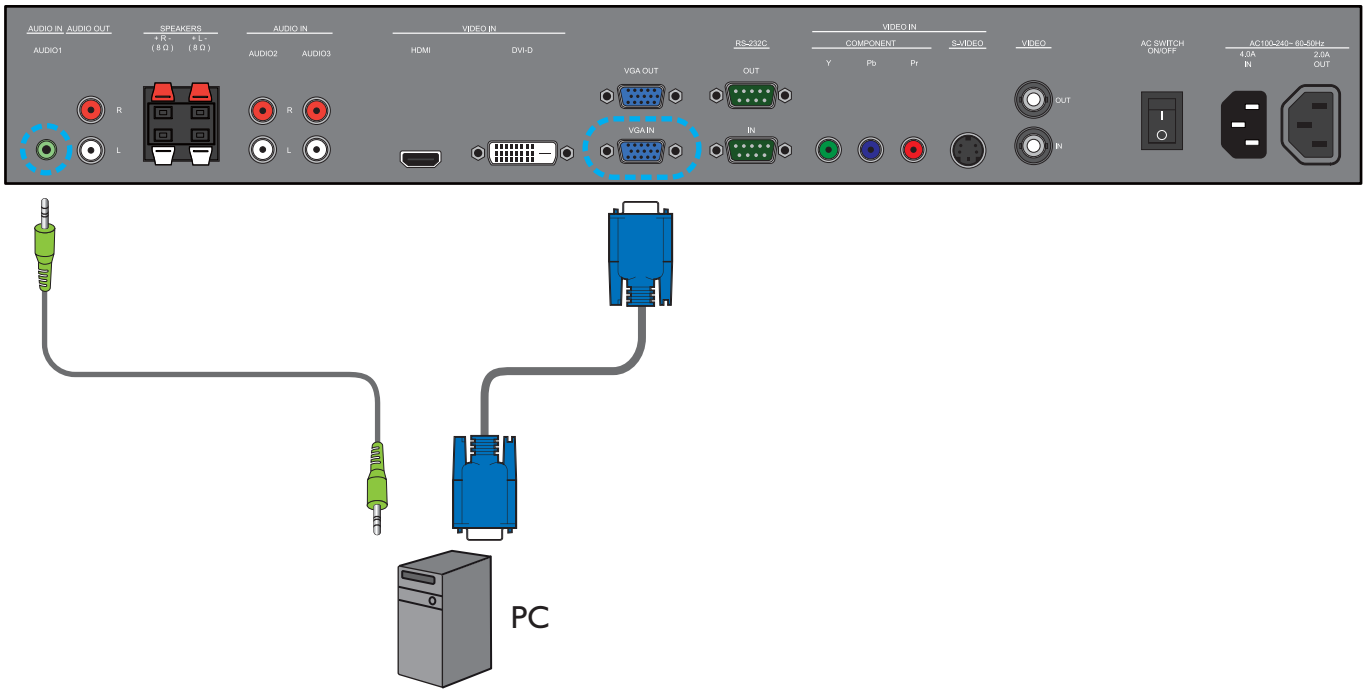

RETURN TO THE CONTENTS

3.3.2. USING DVI INPUT

1. Connect the DVI-D connector of the PC to the DVI-D connector of the display.
2. Insert the audio cable to the AUDIO IN (AUDIO1) input of the display and connect to the corresponding PC connector.

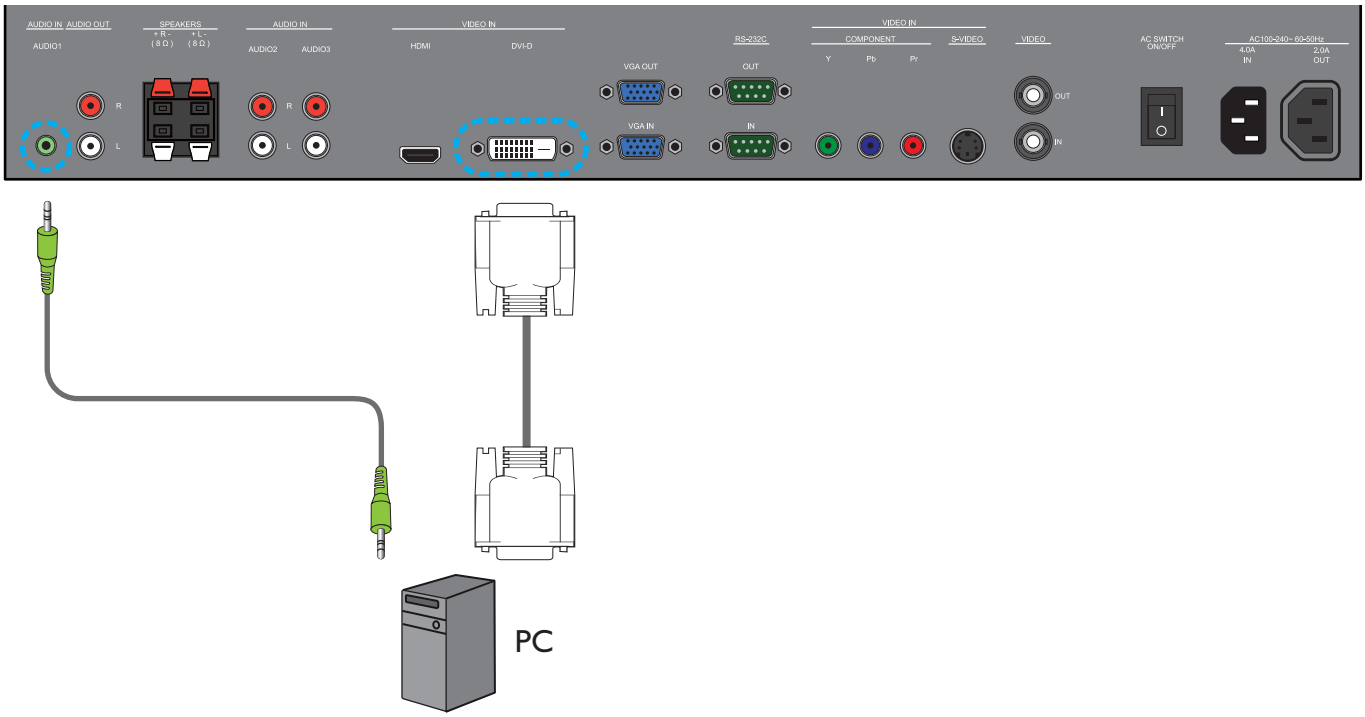

3.3.3. USING HDMI INPUT

1. Connect the DVI-D connector of the PC to the HDMI connector of the display using a DVI-HDMI cable.
2. Insert the audio cable to the AUDIO IN (AUDIO1) input of the display and connect to the corresponding PC connector.

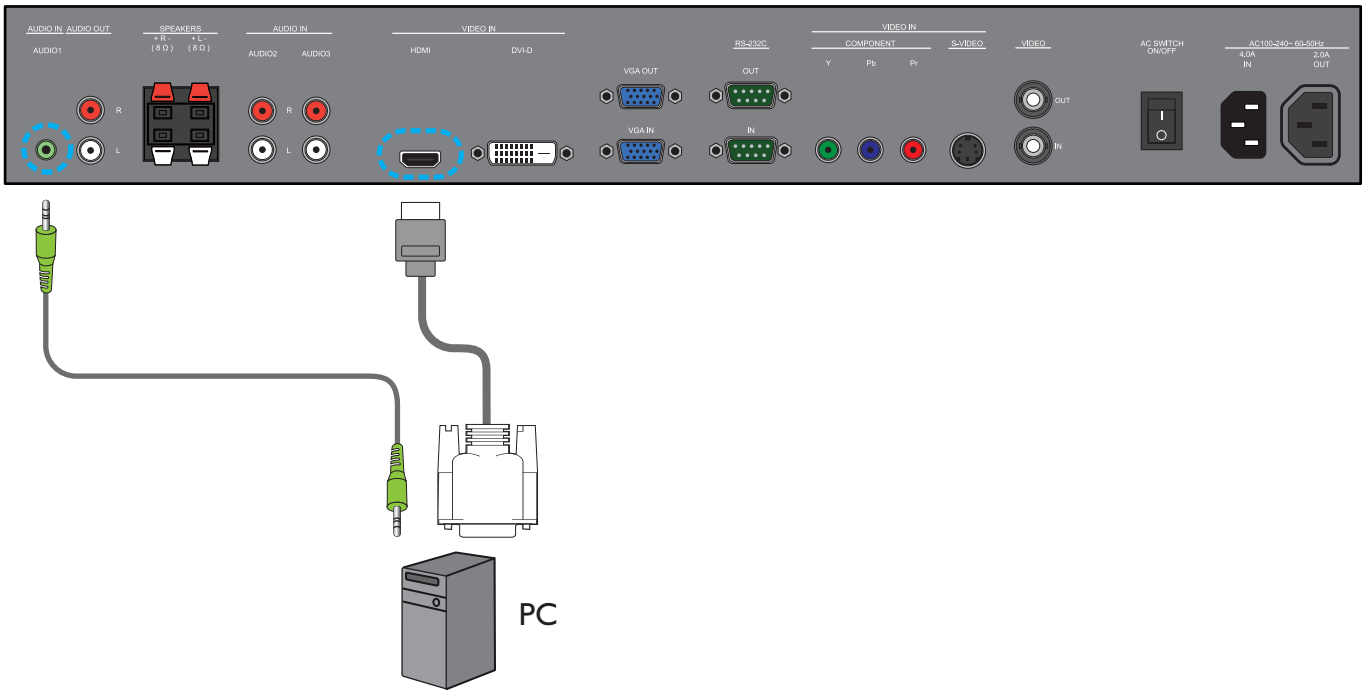

RETURN TO THE CONTENTS

3.4. EXTERNAL AUDIO CONNECTION

3.4.1. CONNECTING EXTERNAL SPEAKERS

1. Connect the speaker wires to the external speaker (SPEAKERS) output of the display.
2. Turn on the unit.

Note: Make sure your display is turned off before connecting the speaker wires.

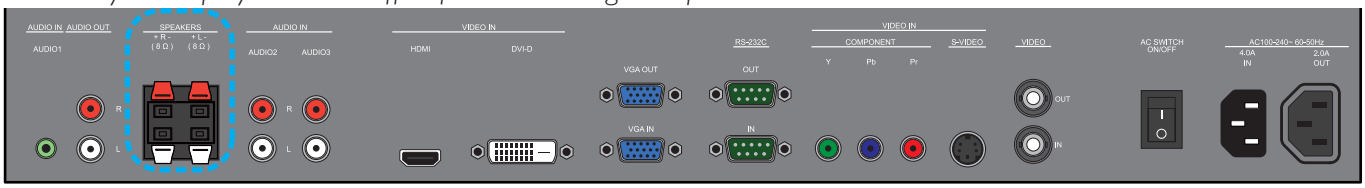

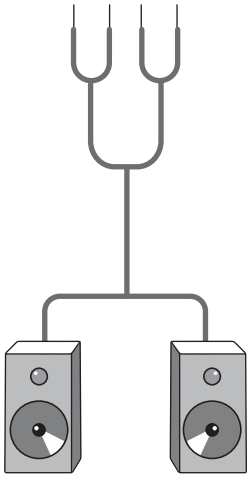

External speakers

3.4.2. CONNECTING EXTERNAL AUDIO DEVICE

Connect the red (R) and white (L) audio jacks of the external audio device to the AUDIO OUT R/L jacks of the display.

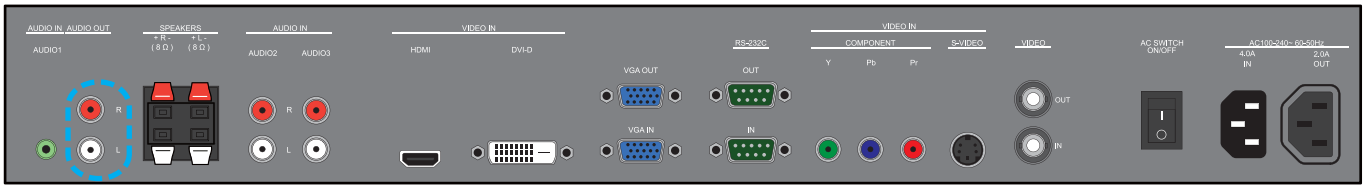

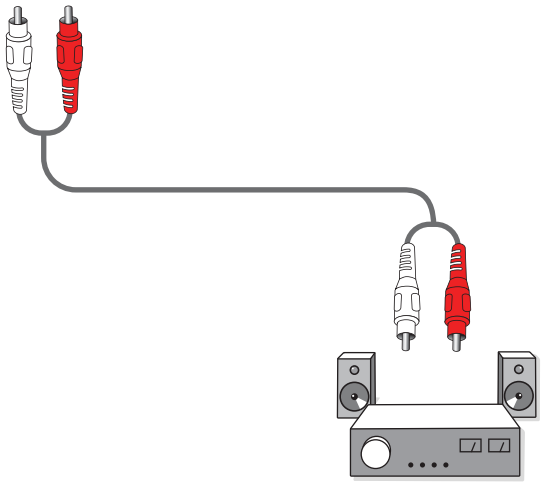

External audio device

RETURN TO THE CONTENTS

3.5. CONNECTING ANOTHER BDL5530EL DISPLAY

You can interconnect multiple BDL5530EL units to create a daisy-chain configuration for applications such as a video wall.

Note: The number of displays that can be used in a daisy-chain configuration will depend on the resolution of the input signal being used.

- Connect the VGA OUT connector of the display to the VGA IN connector of additional BDL5530EL unit.
- Connect the RS-232C OUT connector of the display to the RS-232C IN connector of additional BDL5530EL unit.
- Connect the VIDEO OUT connector of the display to the VIDEO IN connector of additional BDL5530EL unit.
- Connect the AC OUT connector of the display to the AC IN connector of an external media player only.

Additional BDL5530EL display

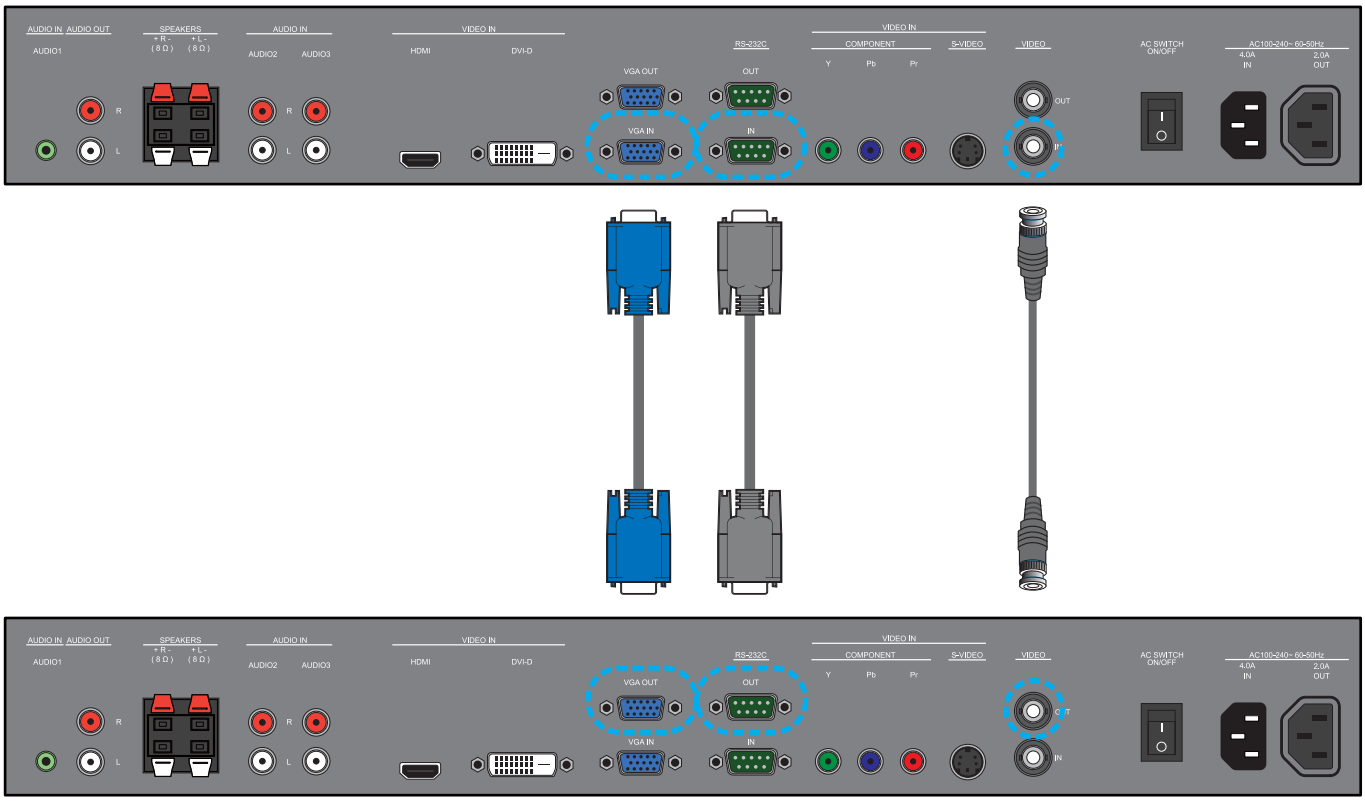

4. OSD MENU

An overall view of the On-Screen Display (OSD) structure is shown below. This can be used as a reference for further adjusting your display.

4.1. NAVIGATING THE OSD MENU

4.1.1. NAVIGATING THE OSD MENU USING THE REMOTE CONTROL

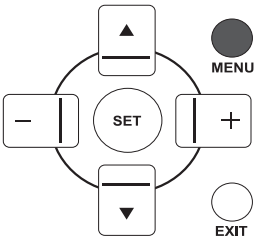

1. Press the **MENU** button on the remote control to display the OSD menu.

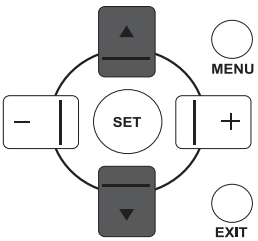

2. Press the **UP**/**DOWN** button to choose the item you want to adjust.

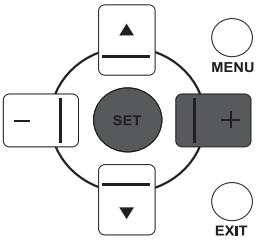

3. Press the **PLUS**/**SET** button to enter the submenu.

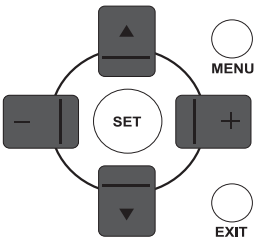

4. In the submenu, press the **UP**/**DOWN** button to toggle between items, or press **PLUS**/**MINUS** button to adjust settings. If there is a submenu, press the **PLUS** button to enter it.

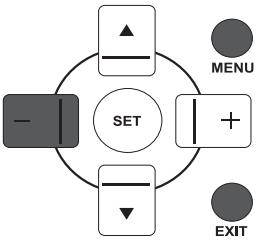

5. Press the **MINUS**/**EXIT** button on the remote control to return to the previous menu, or press the **MENU** button to exit the OSD menu.

RETURN TO THE CONTENTS

4.1.2. NAVIGATING THE OSD MENU USING THE DISPLAY'S CONTROL BUTTONS

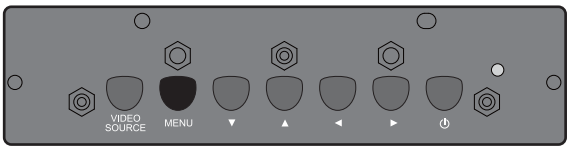

1. Press the **MENU** button to display the OSD menu.

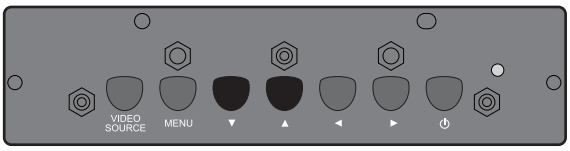

2. Press the ▲/▼ button to choose the item you want to adjust.

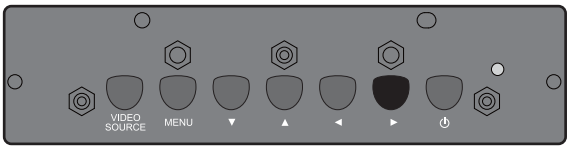

3. Press the ▶ button to enter the submenu.

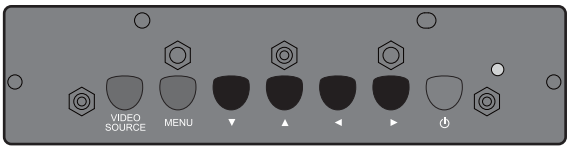

4. In the submenu, press the ▲/▼ button to toggle between items, or press ◀ / ▶ button to adjust settings. If there is a submenu, press the ▶ button to enter it.

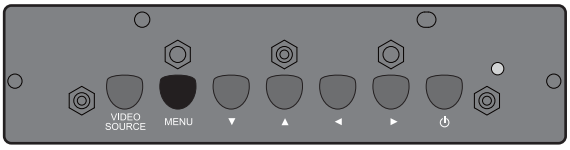

5. Press the **MENU** button on the remote control to return to the previous menu, or press the **MENU** button repeatedly to exit the OSD menu.

RETURN TO THE CONTENTS

4.2. OSD MENU OVERVIEW

4.2.1. PICTURE MENU

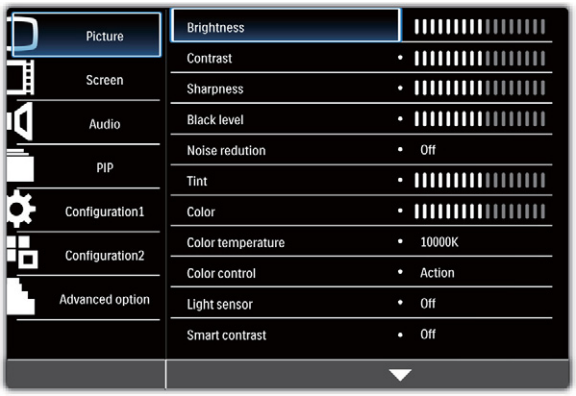

Brightness

Note: This function is not available when Smart contrast, Light sensor or Brightness under Panel saving is turned on. Disable these functions to make Brightness accessible from the OSD menu.

Adjust the overall image brightness by changing the intensity of the LCD panel's backlight.

Use the **PLUS/MINUS** button to adjust.

Contrast

Adjust to sharpen the picture quality. The black portions of the picture become richer and the whites become brighter.

Use the **PLUS/MINUS** button to adjust.

Sharpness

Adjust to improve detail.

Use the **PLUS/MINUS** button to adjust.

Black level

Adjust to change the image brightness.

Use the **PLUS/MINUS** button to adjust.

Noise reduction

Note: For Video, S-Video, Component and HDMI inputs with interlaced video only.

Adjust to remove the noise in the image. You can select a suitable noise reduction level.

Use the **UP/DOWN** button to make selection.

Tint

Note: For Video, S-Video, Component, and HDMI inputs with YUV color space only. (YUV is a color space typically used as part of a color image pipeline.)

Adjust to change the color tint of the image.

Use the **PLUS/MINUS** button to adjust. Press the **PLUS** button and the flesh tone color turns slightly green. Press the **MINUS** button and the flesh tone color turns slightly purple.

Color

Note: For Video, S-Video, Component, and HDMI inputs with YUV color space only. (YUV is a color space typically used as part of a color image pipeline.)

Adjust to increase or decrease the intensity of colors in the image.

Press the **PLUS** button to increase color intensity, or press the **MINUS** button to decrease it.

RETURN TO THE CONTENTS

Color temperature
Select a color temperature for the image. The image has a reddish tint with a lower color temperature, whilst a higher color temperature gives off a more bluish tint.
Use the **UP/DOWN** button to make selection.

Color control
Note: This function is only available when Color temperature is set to User.
With this function you can adjust the color tones of the image precisely by changing the R (Red), G (Green) and B (Blue) settings independently.
Press the **UP/DOWN** button to select **R**, **G** or **B**, and press the **PLUS/MINUS** button to adjust.

Light sensor
Note: This function is not available when Smart contrast or Brightness under Panel saving is turned on. Disable these functions to make Light sensor accessible from the OSD menu.
Choose to enable or disable the ambient light sensor. Once enabled, the image brightness will adjust automatically as the ambient lighting conditions change.
Use the **UP/DOWN** button to make selection.

Smart contrast
Note: This function is not available when Light sensor or Brightness under Panel saving is turned on. Disable these functions to make Smart contrast accessible from the OSD menu.
When turned on, this function helps enhance image contrast when displaying dark scenes.
Use the **UP/DOWN** button to make selection.

Smart picture
Select a smart picture mode from:
- **Highbright**: for moving images such as Video
- **Standard**: for images (factory setting)
- **sRGB**: for text based images
- **Cinema**: for movies.
- **User**: create your own picture settings. This mode is automatically selected after you change the settings in the **Picture** menu.

Use the **UP/DOWN** button to make selection.

Video source
Select a video input source.
Use the **UP/DOWN** button to toggle between
- **HDMI**
- **DVI-D**
- **VGA**
- **Component**
- **S-Video**
- **Video**

Picture reset
Reset all settings in the **Picture** menu.
Use the **PLUS/MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

4.2.2. SCREEN MENU

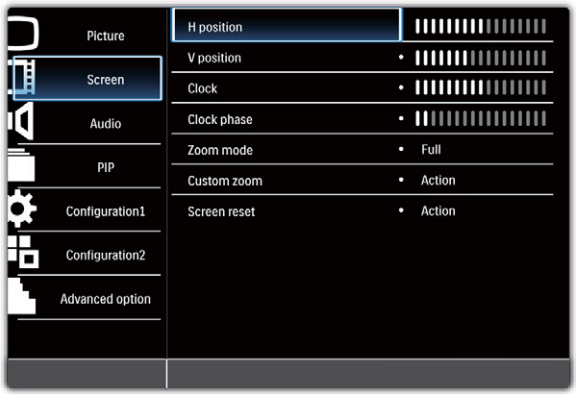

H position

Note: For VGA input only.

Adjust the horizontal placement of the picture.

Press the **PLUS** button to move the image to the right, or press the **MINUS** button to move the image to the left.

V position

Note: For VGA input only.

Adjust the vertical placement of the picture.

Press the **PLUS** button to move the image up, or press the **MINUS** button to move the image down.

Clock

Note: For VGA input only.

Adjust the width of the image.

Press the **PLUS** button to expand the width of the image, or press the **MINUS** button to shrink it.

Clock phase

Note: For VGA input only.

Adjust to improve the focus, clarity and stability of the image.

Use the **PLUS/MINUS** button to adjust.

Zoom mode

The pictures you receive may be transmitted in 16:9 format (widescreen) or 4:3 format (conventional screen). 16:9 pictures sometimes have a black band at the top and bottom of the screen (letterbox format). This function allows you to optimize the picture display on screen. The following zoom modes are available:



- **Full** - This mode restores the correct proportions of pictures transmitted in 16:9 using the full screen display.



- **Normal** - The picture is reproduced in 4:3 format and a black band is displayed on either side of the picture.



- **Dynamic** - Fill the entire screen by stretching 4:3 pictures non-proportionally.
- **Custom** - Choose to apply the custom zoom settings in the **Custom zoom** submenu.

  Note: This mode does not support deinterlacing. The screen may flicker when displaying interlaced video.
- **Real** - This mode displays the image pixel-by-pixel on screen without scaling the original image size.

RETURN TO THE CONTENTS

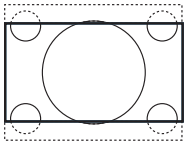

• **21:9 -** The picture is enlarged to 16:9 format. This mode is recommended when displaying pictures that have black bands at the top and bottom (letterbox format).

Note: This mode does not support deinterlacing. The screen may flicker when displaying interlaced video.

Custom zoom

Note: This item is only available when Zoom mode is set to Custom.

You can use this function to further customize the zoom settings to suit the image you want to display.

Use the **UP**/**DOWN** button to toggle between the following items, and use the **PLUS**/**MINUS** button to adjust.



• **Zoom -** Expands the horizontal and vertical sizes of the image simultaneously.

• **H zoom -** Expands the horizontal size of the image only.



• **V zoom -** Expands the vertical size of the image only.

• **H position -** Moves the horizontal position of the image left or right.



• **V position -** Moves the vertical position of the image up or down.

Screen reset

Reset all settings in the **Screen** menu.

Use the **PLUS**/**MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

4.2.3. AUDIO MENU

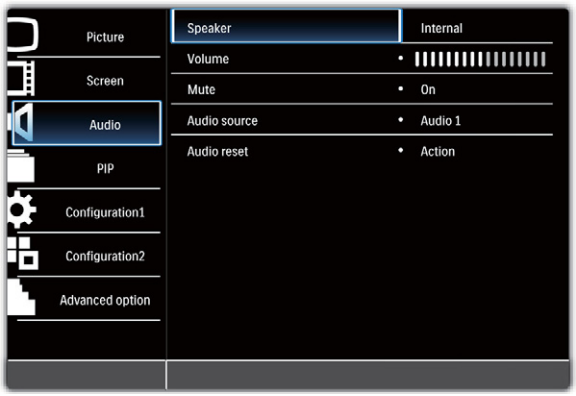

Speaker
Set the display to play audio using the built-in (internal) speaker, external speakers or external audio devices (if connected).
Use the **UP/DOWN** button to toggle between
- **Internal**
- **External**
- **Line-out**

Volume
Adjust to increase or decrease the audio output level.
Use the **PLUS/MINUS** button to adjust.

Mute
To turn the mute function on/off.
Use the **UP/DOWN** button to make selection.

Audio source
To select the audio input source according to the source connected to the audio input and HDMI sockets on the display.

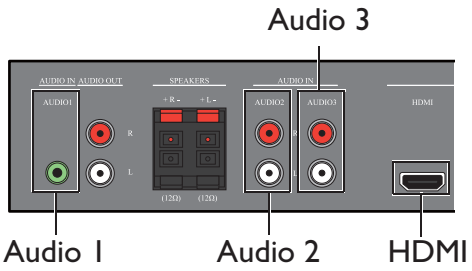

Use the **UP/DOWN** button to toggle between
- **Audio 1**
- **Audio 2**
- **Audio 3**
- **HDMI**

Audio reset
Reset all settings in the **Audio** menu.
Use the **PLUS/MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

4.2.4. PIP MENU

Notes:

- *For Component, VGA, DVI-D and HDMI inputs only.*
- *For Full and Normal zoom modes only.*
- *The PIP function is turned off by default. Press the PIP ON/OFF button on the remote control to turn on PIP and make it accessible from the OSD menu.*

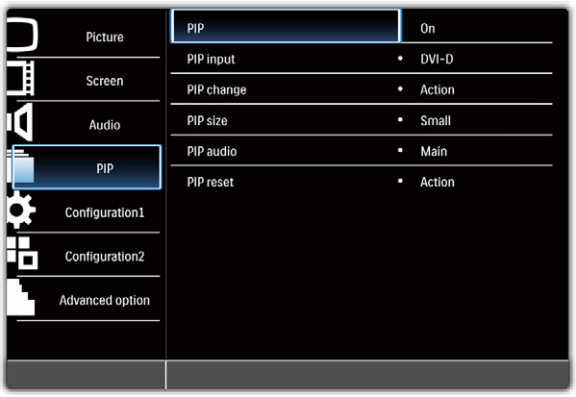

PIP

To turn PIP mode on/off.

Use the **UP/DOWN** button to make selection.

PIP input

Select the input signal for the sub-picture.

Use the **UP/DOWN** button to make selection.

PIP change

To exchange between the main picture and sub picture.

Use the **PLUS/MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

PIP size

Select the size of the sub picture in the PIP mode.

Use the **UP/DOWN** button to toggle between

- **Large**
- **Middle**
- **Small**

PIP audio

Select the audio source in the PIP mode.

Use the **UP/DOWN** button to toggle between

- **Main** - Select audio from the main picture
- **Sub** - Select audio from the sub picture.

PIP reset

Reset all settings in the **PIP** menu.

Use the **PLUS/MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

Notes:

- *The PIP function is only available under certain signal source combinations as shown in the table below.*

		Main picture signal source					
		Video	S-Video	Component	VGA	DVI-D	HDMI
Sub picture signal source	Video	×	×	×	×	×	×
	S-Video	×	×	×	×	×	×
	Component	×	×	×	×	○	○
	VGA	×	×	×	×	○	○
	DVI-D	×	×	○	○	×	×
	HDMI	×	×	○	○	×	×

(○: PIP function available, ×: PIP function unavailable)

- *The availability of the PIP function will also depend on the resolution of the input signal being used.*

RETURN TO THE CONTENTS

4.2.5. CONFIGURATION 1 MENU

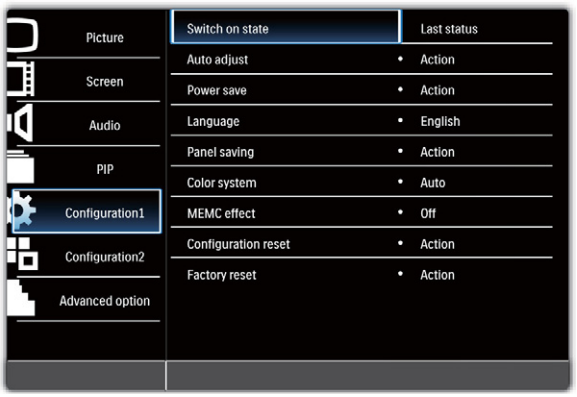

Switch on state
Set the display to turn on or remain off when the power cord is connected to a wall outlet.
Use the **UP**/**DOWN** button to toggle between

- **Last status** - The display will return to the previous power status (on/off/standby) when removing and replacing the power cord.
- **Forced on** - The display will turn on when the power cord is connected to a wall outlet.
- **Power off** - The display will remain off when the power cord is connected to a wall outlet.

Auto adjust
Note: For VGA input only.
Use this function to automatically optimize the display of the VGA image. Press the **SET** button to adjust.

Power save
Set the display to reduce the power automatically.
Use the **UP**/**DOWN** button to toggle between

- **RGB** - Select **On** to let the display enter DPMS (Display Power Management Signaling) mode when no signal can be detected from the HDMI, DVI-D, and VGA inputs after three successive cycles. Use the **PLUS**/**MINUS** button to make selection.
- **Video** - Select **On** to let the display enter power saving mode when no signal is detected from the Video, S-Video, and Component inputs after three successive cycles. Use the **PLUS**/**MINUS** button to make your selection.

Language
Select the language for the OSD menu.
Use the **UP**/**DOWN** button to select a language.

Panel saving
Choose to enable the panel saving functions to reduce the risk of the "image persistence". Use the **PLUS**/**MINUS** button to toggle between

- **Brightness** - Select **On** and the brightness of the image will be reduced to an appropriate level, and the **Brightness** setting in the **Picture** menu will become unavailable. Use the **PLUS**/**MINUS** button to make selection.
- **Pixel shift** - Select the time interval for the display to slightly expand the image size and shift the pixel position in four directions (up, down, left, and right). Use the **PLUS**/**MINUS** button to make selection (**Off-900** seconds from current time). This helps to alleviate the issues of ghost imaging.

IMPORTANT: It is not recommended to keep a single static image displayed on your unit for long periods of time. This can cause image sticking, or ghost images, which will decrease the quality of your images. In

some instances, ghost image damage can be permanent. To avoid such issues, we strongly recommend one of the following actions:

- Change the picture periodically
- Enable **Pixel shift** (See Pixel shift under Section 4.2.5.CONFIGURATION 1 MENU)
- Use a screen saver with changing images

Color system

Note: For Video and S-Video inputs only.

Select the color system depending on the input video format.

Use the **UP**/**DOWN** button to make selection.

- **Auto**
- **PAL 4.43**
- **PAL 3.58**
- **SECAM**
- **NTSC 4.43**
- **NTSC 3.58**

MEMC effect

To turn the Motion Estimation, Motion Compensation (MEMC) effect on/off.

Use the **UP**/**DOWN** button to make selection.

Configuration reset

Reset all settings in the **Configuration 1** menu.

Use the **PLUS**/**MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

Factory reset

Reset all settings in the **Picture**, **Screen**, **Audio**, **PIP**, **Configuration 1**, **Configuration 2**, and **Advanced option** menus. Use the **PLUS**/**MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

4.2.6. CONFIGURATION 2 MENU

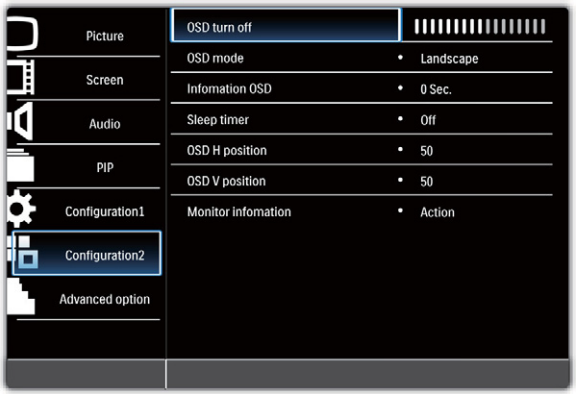

OSD turn off
Set the period of time the OSD menu stays on the screen (from **5** to **120** seconds)
Use the **PLUS**/**MINUS** button to adjust.

OSD mode
Select the orientation of the OSD according to the orientation the display is installed.
Use the **UP**/**DOWN** button to toggle between
• **Portrait** • **Landscape**

Information OSD
Set the period of time the information OSD stays on the screen. The information OSD will display when input signal is changed.
Use the **UP**/**DOWN** button to adjust. The information OSD will not appear when **Off** is selected. If **0** is selected, the information OSD will remain on the screen.

Sleep timer
Set the display to turn itself off to standby mode within a user-specified amount of time. (**Off**-**24** hours from current time)
Use the **UP**/**DOWN** button to adjust.
Note: When the Sleep timer is activated, Schedule settings will be disabled.

OSD H position
Adjust the horizontal position of the OSD menu.
Use the **UP**/**DOWN** button to adjust.

OSD V position
Adjust the vertical position of the OSD menu.
Use the **UP**/**DOWN** button to adjust.

Monitor information
Shows the information about your display, including model name, serial number, operating hours and software version.
Press the **PLUS** button to view the information. Press the **EXIT** button to return to the previous menu.

RETURN TO THE CONTENTS

4.2.7. ADVANCED MENU

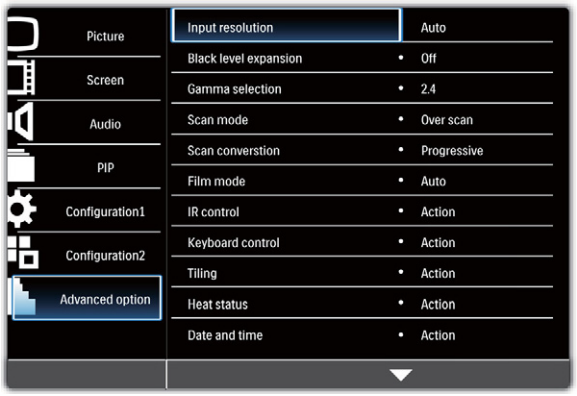

Input resolution

Note: For VGA input only.

Set the resolution of the VGA input. This is only required when the display is unable to detect the VGA input resolution correctly.

Use the **UP/DOWN** button to toggle between

- **Auto**
- **1024x768**
- **1280x768**
- **1360x768**
- **1366x768**

Black level expansion

Note: For Video, S-Video, Component, and HDMI (video mode) inputs only.

This feature offers deeper blacks for an even better image quality. Select a suitable black level expansion setting to reveal more details in the dark parts of an image.

Use the **UP/DOWN** button to toggle between

- **Off**
- **Low**
- **Middle**
- **High**

Gamma selection

Gamma is what controls the overall brightness of an image. Images which are not corrected properly can appear too white or too dark, so controlling the gamma properly can have a huge influence on the overall picture quality of your display.

Select a display gamma value to best suit the image and optimize image brightness and contrast.

Use the **UP/DOWN** button to toggle between

- **2.2**
- **2.4**
- **Native**

Scan mode

Note: For Video, S-Video, Component, and HDMI (video mode) inputs only.

Change the display area of the image.

Use the **UP/DOWN** button to toggle between

- **Over scan** - Displays about 95% of the original size of the image. The rest of the areas surrounding the image will be cut off.
- **Under scan** - Displays the image in its original size.

Scan conversion

Note: For Video, S-Video, Component, and HDMI (video mode) inputs only.

Choose to enable or disable the IP (Interlace to Progressive) conversion function.

Use the **UP/DOWN** button to toggle between

RETURN TO THE CONTENTS

- **Progressive** - Enable the IP conversion function (recommended). Once enabled, the interlace input signal will be converted to progressive format for better display quality.
- **Interlace**: Disable the IP function. This mode is suitable for displaying motion pictures, but increases the chance of image retention.

Film mode

Note: For Video, S-Video, Component, and HDMI (video mode) inputs only.

Choose to turn on or off the film mode frame conversion function.

Use the **UP**/**DOWN** button to toggle between

- **Auto** - Enable the film mode frame conversion function for movies and motion pictures. The display converts a 24 frames-per-second (24 fps) input signal format to DVD video signal format. Once this function is enabled, it is recommended that you set the **Scan conversion** function to **Progressive**.
- **Off** - Disable the film mode frame conversion function. This mode is suitable for TV broadcasting and VCR signals.

IR control

Select the operation mode of the remote control when multiple BDL5530EL units are connected via RS232C cables.

Use the **UP**/**DOWN** button to toggle between

- **Normal** - All units can be operated normally by the remote control.
- **Primary** - Designate this display as the primary unit for remote control operation. Only this display will be operated by the remote control.
- **Secondary** - Designate this display as the secondary unit. This display can not be operated by the remote control, and will only receive the control signal from the primary unit via the RS232C connection.
- **Lock** - Lock the remote control function of this display. To unlock, press and hold the **DISPLAY** button on the remote control for 5 seconds.

Keyboard control

Choose to enable or disable the function of the keyboard (control buttons) on the display.

Use the **UP**/**DOWN** button to toggle between

- **Lock** - Disable the keyboard.
- **Unlock** - Enable the keyboard.

Tiling

Notes:

- *For VGA input only.*
- *This function is not available when PIP is turned on. Disable PIP to make Tiling accessible from the OSD menu.*

With this function you can create a single large screen matrix (display wall) that consists of up to 25 BDL5530EL displays (5 units on the vertical side and 5 units on the horizontal side). This requires you to connect each BDL5530EL unit in a daisy-chain configuration.

RETURN TO THE CONTENTS

Example:

2 x 2 screen matrix (4 displays)

H monitors = 2

V monitors = 2

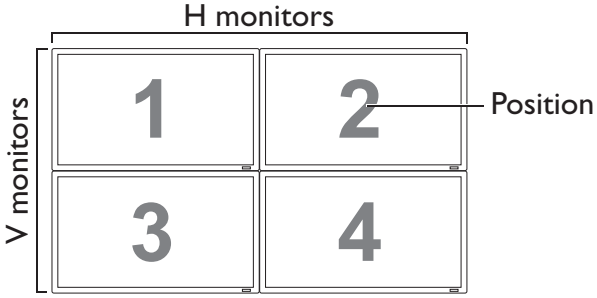

5 x 5 screen matrix (25 displays)

H monitors = 5

V monitors = 5

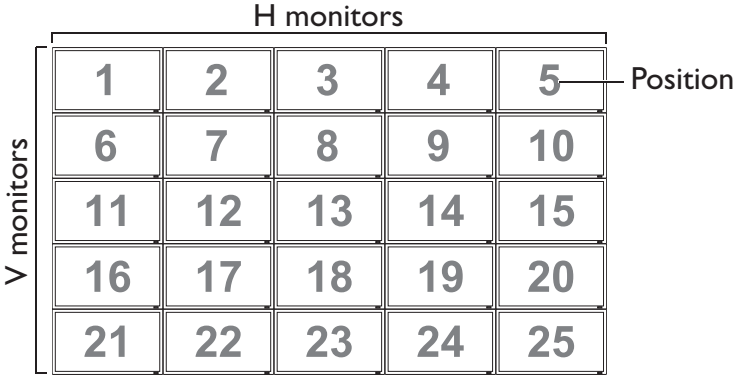

- **H monitors** - Select the number of displays on the horizontal side.
- **V monitors** - Select the number of displays on the vertical side.
- **Position** - Select the position of this display in the screen matrix. Position is defined by the total number of displays in the video wall counting from the top, left hand display and counting horizontally. The number is then continued on the next row down, and the procedure is continued until the final display is reached. See examples above for further explanation.
- **Frame comp.** - Choose to turn frame compensation on or off. If turned on, the display will adjust the image to compensate for the width of the bezels in order to accurately display the image.

Frame comp. - Off

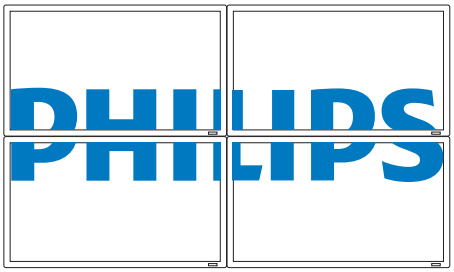

Frame comp. - On

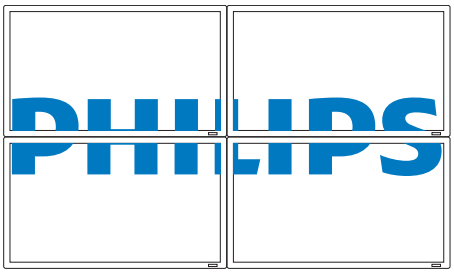

- **Enable**: Choose to enable or disable the **Tiling** function. If enabled, the display will apply the settings in **H monitors**, **V monitors**, **Position**, and **Frame comp.**.

Note: PIP function is disabled when Tiling is enabled.

- **Switch on delay**: Choose to enable or disable a sequence in turning on the screen matrix. If enabled, the display will turn on one horizontal matrix at a time starting from the top row.

Heat status

This function allows you to check the thermal status of the display at any time. The accuracy of the temperature indicated is ±5 degrees Celsius.

Press the **PLUS** button to view the heat status. Press the **EXIT** button to return to the previous menu.

Date and time

Adjusts current date and time for the display's internal clock.

Press the **UP/DOWN** button to toggle between the **Year**, **Month**, **Day**, **Hour**, **Minute**, and **Daylight saving time** settings, and then press the **PLUS/MINUS** button to adjust.

Schedule

Note: We recommend setting up current date and time in Date and time before using the Schedule function.

RETURN TO THE CONTENTS

This function allows you to program up to seven different scheduled time intervals for the display. You can select the time the unit turns on and turns off, the days in a week it is activated, and which input source the display will use for each scheduled activation period.

For example, if you wish to turn the display on automatically at 7:30 AM and off at 10:30 PM on Tuesdays and Wednesdays and display the signal from the HDMI input:

		Time																																					
		0:00	1:00	2:00	3:00	4:00	5:00	6:00	7:00	8:00	9:00	10:00	11:00	12:00	13:00	14:00	15:00	16:00	17:00	18:00	19:00	20:00	21:00	22:00	23:00															
Day	MON												Off																											
	TUE				Off												On																						Off	
	WED				Off												On																						Off	
	THU												Off																											
	FRI												Off																											
	SAT												Off																											
	SUN												Off																											

Perform the following steps:

1. With the **Schedule** item highlighted in the **Advanced option** menu, press the **PLUS** button to open the submenu.

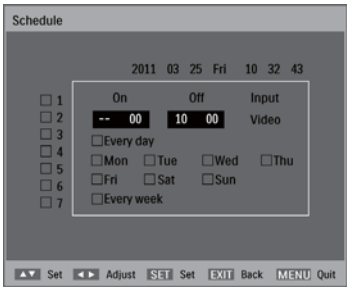

2. Press the **UP**/**DOWN** button to select schedule item #1 (☐ 1), and then press the **SET** button. A check mark will appear in the box indicating that the schedule item has been selected.
3. With the **On** item highlighted, press the **SET** button and then press the **UP**/**DOWN** button to set the power on hour to "07".
4. Press the **PLUS** button to move to the minute slot. Press the **UP**/**DOWN** button to set the power on minute to "30", then press the **EXIT** button.
5. Press the **PLUS** button to highlight the **Off** item. Press the **SET** button, and then press the **UP**/**DOWN** button to set the power off hour to "22".
6. Press the **PLUS** button to move to the minute slot. Press the **UP**/**DOWN** button to set the power off minute to "30", then press the **EXIT** button.
7. Press the **PLUS** button to highlight the **Input** item, and then press the **UP**/**DOWN** button to select **HDMI**.
8. Press the **PLUS** button to select ☐ **Tue** and then press the **SET** button. A check mark will appear in the box indicating that it has been selected.
9. Press the **PLUS** button to select ☐ **Wed** and then press the **SET** button. A check mark will appear in the box indicating that it has been selected.

RETURN TO THE CONTENTS

10. Now you have completed the schedule settings. The on-screen display should look like the illustration below:

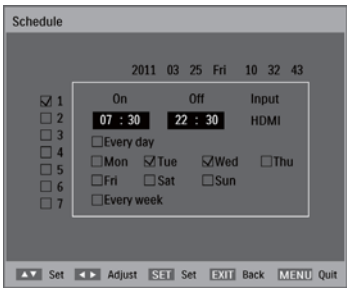

11. Press the **EXIT** button and the menu will close and the schedule settings will take effect.

To set up more schedule items, repeat the steps above except that a different schedule item should be selected (schedule item #2 (☐ 2) through #7 (☐ 7)) in step 2.

Notes:

- *Seven scheduling options are available so that you can choose between different video input modes for different schedules during the week. For example, VGA input on a Monday, HDMI on Tuesday to Friday, S-Video for weekends.*
- *If you do not want to use a power on time, select "--" for the power on hour slot, and "00" for the minute slot. The display will only turn off at the time you set.*
- *If you do not want to use a power off time, select "--" for the power off hour slot, and "00" for the minute slot. The display will only turn on at the time you set.*
- *If no input source is selected, the default input source (Video) will be used.*
- *If Every day is selected, the display will turn on everyday regardless of other day settings (e.g Mon, Tue, Wed..., etc.).*
- *Should schedule periods overlap, the power on time has priority over power off time. For example, if schedule item #1 sets the display to power on at 10:00 AM and off at 5:00 PM, and schedule item #2 sets the display to power on at 4:00 PM and off at 9:00 PM on the same day, then the display will power on at 10:00 AM and off at 9:00 PM.*
- *If there are multiple schedule items programmed for the same time period, then the highest numbered schedule item has priority. For example, if schedule items #1 and #2 both set the display to power on at 7:00 AM and off at 5:00 PM, then only schedule item # 1 will take effect.*

Monitor ID

Set the ID number for controlling the unit via the RS232C connection. Each display must have a unique ID number when multiple BDL5530EL units are connected.

See table under "Tiling" for more information. Use the **PLUS**/**MINUS** button to select an ID.

DDC/CI

Choose to turn **On** or **Off** the DDC/CI communication function. Select ON for normal use.

Use the **UP**/**DOWN** button to make selection.

Smart power

Set the display to reduce the power consumption automatically. Setting to **High** will bring the most power savings.

Use the **UP**/**DOWN** button to toggle between

- **Off**
- **Medium**
- **High**

Auto signal detection

Select to let the unit detect and display available signal source automatically.

- **On** - Set the unit to display the image automatically once a signal is connected.

RETURN TO THE CONTENTS

• **Off** - Once a signal is connected, it can only be selected manually.
Use the **UP**/**DOWN** button to make selection.

Advanced option reset
Reset all settings in the **Advanced option** menu.

Press the **PLUS** button to open the submenu, and then press the **PLUS**/**MINUS** button to make selection. Select **Reset** and press the **SET** button to restore settings to factory preset values. Press the **EXIT** button to cancel and return to the previous menu.

RETURN TO THE CONTENTS

5. INPUT MODE

VGA Resolution

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	H Pixels	V Lines				
VGA	640	480	60 Hz	25.175 MHz	4:3	Video Graphic Array
			72 Hz	31.5 MHz		
			75 Hz	31.5 MHz		
WVGA	720	400	70 Hz	33.75 MHz	16:9	Wide Video Graphic Array
SVGA	800	600	60 Hz	40 MHz	4:3	Super VGA
			75 Hz	49.5 MHz		
XGA	1024	768	60 Hz	65 MHz	4:3	Extended Graphic Array
			75 Hz	78.75 MHz		
WXGA	1280	768	60 Hz	79.5 MHz	5:3	Wide XGA
WXGA	1280	800	60 Hz	79.5 MHz	16:10	Wide XGA
SXGA	1280	960	60 Hz	108 MHz	4:3	Super XGA
SXGA	1280	1024	60 Hz	108 MHz	5:4	Super XGA
WXGA	1360	768	60 Hz	85.5 MHz	16:9	Wide XGA
WXGA	1366	768	60 Hz	85.5 MHz	16:9	Wide XGA
UXGA	1600	1200	60 Hz	162 MHz	4:3	Ultra XGA
HD1080	1920	1080	60 Hz	148.5 MHz	16:9	HD1080

SDTV Resolution

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	H Pixels	V Lines				
480i	720	480	29.97 Hz	13.5 MHz	4:3	Modified NTSC Standard
480p			59.94 Hz	27 MHz		
576i	720	480	25 Hz	13.5 MHz	4:3	Modified PAL Standard
576p			50 Hz	27 MHz		

HDTV Resolution

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	H Pixels	V Lines				
720p	1280	720	50 Hz	74.25 MHz	16:9	Normally DVB Mode
			60 Hz			
1080i	1920	1080	25 Hz	74.25 MHz	16:9	Normally ATSC Mode
			30 Hz			
1080p	1920	1080	50 Hz	148.5 MHz	16:9	Normally ATSC Mode
			60 Hz			

- PC text quality is optimum in HD 1080 mode (1920 x 1080, 60Hz).
- Your PC monitor may appear differently depending on the manufacturer (and your particular version of Windows). Check your PC instruction book for information about connecting your PC to a display.

RETURN TO THE CONTENTS

- If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 31.5KHz (horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the PC power is turned off (or if the PC is disconnected). If this happens, press the **INPUT** button to enter the video mode. Also, make sure that the PC is connected.
- If horizontal synchronous signals seem irregular in RGB mode, check PC power saving mode or cable connections.
- The display settings table complies with IBM/VESA standards, and based on analog input.

RETURN TO THE CONTENTS

6. PIXEL DEFECT POLICY

We strive to deliver the highest quality products and use some of the industry's most advanced manufacturing processes whilst practicing stringent quality control. However, pixel or sub-pixel defects on the PDP / TFT panels used in Plasma- & LCD- displays are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any LCD display with an unacceptable number of defects will be repaired during the warranty period in line with your local guarantee conditions.

This notice explains the different types of pixel defects and defines the acceptable defect level for the BDL5530EL LCD screen. In order to qualify for repair under warranty, the number of pixel defects must exceed a certain level as shown in the reference table. If the LCD screen is within specification a warranty exchange / claim back will be refused. Additionally, because some types or combinations of pixel defects are more noticeable than others, Philips sets even higher quality standards for those.

6.1. PIXELS AND SUB-PIXELS

A pixel, or picture element, is composed of three sub-pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub-pixels of a pixel are lit, the three colored sub-pixels together appear as a single white pixel. When all are dark, the three colored sub-pixels together appear as a single black pixel. Other combinations of lit and dark sub-pixels appear as single pixels of other colors.

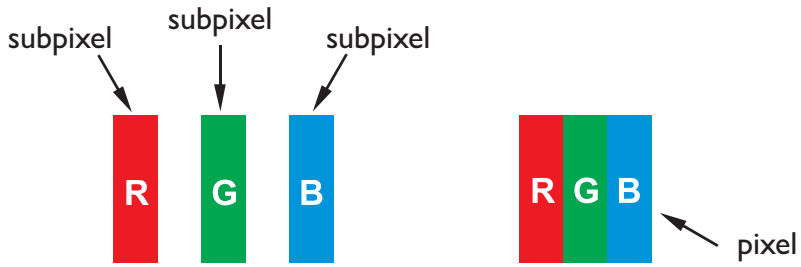

6.2. TYPES OF PIXEL DEFECTS + DOT DEFINITION

Pixel and sub-pixel defects appear on the screen in different ways. There are three categories of pixel defects and several types of sub-pixel defects within each category.

Dot definition = What is a defective "Dot"? :

One or more defective, adjacent sub-pixel is defined as one "dot". The number of defective sub-pixels is not relevant to define a defective dot. This means that a defective dot can consist of one, two or three defective sub-pixels which can be dark or lit.

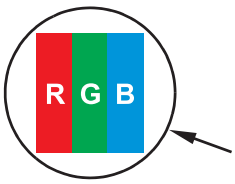

One dot = One Pixel; consists of three sub-pixels of Red; Green and Blue

RETURN TO THE CONTENTS

6.3. BRIGHT DOT DEFECTS

Bright dot defects appear as pixels or sub-pixels that are always lit or "on". These are the examples of bright dot defects:

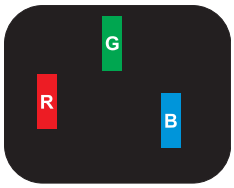	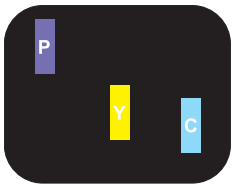	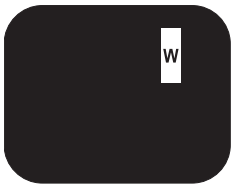
One lit red, green or blue sub-pixel	Two adjacent lit sub-pixels: - Red + Blue = Purple - Red + Green = Yellow - Green + Blue = Cyan (Light Blue)	Three adjacent lit sub-pixels (one white dot)

6.4. DARK DOT DEFECTS

Black dot defects appear as pixels or sub-pixels that are always dark or "off". These are the examples of black dot defects:

		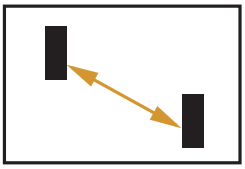
One dark dot	Two adjacent dark dots = 1 pair of dark dots	Two dark dots, specifications define the minimum distance between dark dots

6.5. PROXIMITY OF PIXEL DEFECTS

Because pixel and sub-pixels defects of the same type that are nearby one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects. In the table below you can find specifications about:

- Allowed amount of adjacent dark dots = (adjacent dark dots =1 pair of dark dots)
- Minimum distance between dark dots
- Total no. of all defective dots

6.6. PIXEL DEFECT TOLERANCES

In order to qualify for repair due to pixel defects during the warranty period, a PDP/TFT panel in a Philips LCD display must have pixel or sub-pixel defects exceeding the tolerances listed in the following table.

BRIGHT DOT EFFECT	ACCEPTABLE LEVEL
MODEL	BDL5530EL
1 lit sub pixel	0
BLACK DOT EFFECT	**ACCEPTABLE LEVEL**
1 dark sub pixel	8
TOTAL DOT DEFECTS OF ALL TYPES	**8**

*Note: * 1 or 2 adjacent sub pixel defects = 1 dot defect*

7. CLEANING AND TROUBLESHOOTING

7.1. CLEANING

Caution When Using the Display

- Do not place your hands, face or objects close to the ventilation holes of the display. The top of the display is usually very hot due to the high temperature of air being expelled through the ventilation holes. Burns or personal injuries may occur if any body parts are brought too close. Placing any object near the top of the display could also result in heat related damage to the object as well as the display itself.
- Be sure to disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Disconnect the power plug from the wall outlet as a safety precaution before carrying out any type of cleaning or maintenance procedure.

Front Panel Cleaning Instructions

- The front of the display has been specially treated. Wipe the surface gently using only a cleaning cloth or a soft, lint-free cloth.
- If the surface becomes dirty, soak a soft, lint-free cloth in a mild detergent solution. Wring the cloth to remove excess liquid. Wipe the surface of the display to remove dirt. Then use a dry cloth of the same type to dry.
- Do not scratch or hit the surface of the panel with fingers or hard objects of any kind.
- Do not use volatile substances such as sprays, solvents and thinners.

Cabinet Cleaning Instructions

- If the cabinet becomes dirty, wipe with a soft, dry cloth.
- If the cabinet is extremely dirty, soak a lint-free cloth in a mild detergent solution. Wring the cloth to remove as much moisture as possible. Wipe the cabinet. Use another dry cloth to wipe over until the surface is dry.
- Do not allow any water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, operating problems, or electrical and shock hazards may result.
- Do not scratch or hit the cabinet with fingers or hard objects of any kind.
- Do not use volatile substances such as sprays, solvents and thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.

RETURN TO THE CONTENTS

7.2. TROUBLESHOOTING

Symptom	Possible Cause	Remedy
No picture is displayed	1. The power cord is disconnected. 2. The main power switch on the back of the display is not switched on. 3. The selected input has no connection. 4. The display is in standby mode with VGA.	1. Plug in the power cord. 2. Make sure the power switch is switched on. 3. Connect a signal connection to the display.
Interference displayed on the display or audible noise is heard	Caused by surrounding electrical appliances, traffic or fluorescent lights.	Move the display to another location to see if the interference is reduced.
Color is abnormal	The signal cable is not connected properly.	Make sure that the signal cable is attached firmly to the back of the display.
Picture is distorted with abnormal patterns	1. The signal cable is not connected properly. 2. The input signal is beyond the capabilities of the display.	1. Make sure that the signal cable is attached firmly. 2. Check the video signal source to see if it is beyond the range of the display. Please verify its specifications with this display's specification section.
Display image doesn't fill up the full size of the screen	The zoom mode is not correctly set.	Use the **Zoom mode** or **Custom zoom** function in the **Screen** menu to fine-tune display geometry and time frequency parameter.
Can hear sound, but no picture	Improperly connected source signal cable.	Make sure that both video inputs and sound inputs are correctly connected.
Can see picture but no sound is heard	1. Improperly connected source signal cable. 2. Volume is turned all the way down. 3. **Mute** is turned on. 4. No external speaker connected.	1. Make sure that both video and sound inputs are correctly connected. 2. Use **VOL UP**/**VOL DOWN** button to hear sound. 3. Switch **Mute** off by using the **MUTE** button. 4. Connect external speakers and adjust the volume to a suitable level.
Some picture elements do not light up	Some pixels of the display may not turn on.	This display is manufactured using an extremely high level of precision technology: however, sometimes some pixels of the display may not display. This is not a malfunction.
After-Images can still be seen on the screen after the display is powered off. (Examples of still pictures include logos, video games, computer images, and images displayed in 4:3 normal mode)	A still picture is displayed for an over extended period of time	Do not allow a still image to be displayed for an extended period of time as this can cause a permanent after-image to remain on the display. Refer to 4.2.5.CONFIGURATION 1 MENU for further details.

RETURN TO THE CONTENTS

8. TECHNICAL SPECIFICATIONS

Display

Item	Specifications
Screen size (Active Area)	54.6” (138.68 cm) LCD
Aspect ratio	16:9
Number of pixels	1920 (H) x 1080 (V)
Pixel pitch	0.21 (H) x 0.63 (V) [mm]
Displayable colors	1073.7M colors
Brightness	450 cd/m^2
Smart contrast	19500:1
Contrast ratio (typical)	4000:1
Viewing angle	178 degrees

In/Out Terminals

Item		Specifications
Speaker Output	Internal Speaker	12W (L) + 12W (R) [RMS]/8Ω 1 Way 1 Speaker System 82 dB/W/M/160 Hz ~ 13 KHz
Audio Output	RCA Jack x 1	0.5V [rms] (Normal)/ 2 Channel (L+R)
Audio Input	RCA Jack x 2	0.5V [rms] (Normal)/ 2 Channel (L+R)
RS232C	D-Sub Jack x 2 (9 pin)	TXD + RXD (1:1)
HDMI Input	HDMI Jack x 1 (Type A)	Digital RGB: TMDS (Video + Audio) MAX: Video - 720p, 1080p, 1920 x 1080/60 Hz (WUXGA) Audio - 48 KHz/ 2 Channel (L+R)
DVI-D Input	DVI-D jack x 1	Digital RGB: TMDS (Video)
RGB Input	D-Sub Jack x 1 (15 pin)	Analog RGB: 0.7V [p-p] (75Ω), H/CS/V: TTL (2.2kΩ), SOG: 1V [p-p] (75Ω) MAX: 720p, 1080p, 1920 x 1080/60 Hz (WUXGA)
	3.5mm Mini-jack x 1	Audio: 0.5V [rms] (Normal)/2 Channel (L+R)
RGB Output	D-Sub Jack x 1 (15 pin)	Analog RGB: 0.7V [p-p] (75Ω), H/CS/V: TTL (2.2kΩ), SOG: 1V [p-p] (75Ω) MAX: 720p, 1080p, 1920 x 1080/60 Hz (WUXGA)
Component Input	RCA Jack x 1	Y: 1V [p-p] (75Ω), Pb: 0.7V [p-p] (75Ω), Pr: 0.7V [p-p] (75Ω) MAX: 480i, 576i, 480p, 576p, 720p, 1080i, 1080p
S-Video Input	Mini DIN Jack x 1 (4 pin)	Y: 1V [p-p] (75Ω), C: 0.286V [p-p] (75Ω) [NTSC] Y: 1V [p-p] (75Ω), C: 0.300V [p-p] (75Ω) [PAL/SECAM]
Video Input	BNC Jack x 1	Video: 1V [p-p] (75Ω) [NTSC/PAL/SECAM]
Video Output	BNC Jack x 1	Video: 1V [p-p] (75Ω) [NTSC/PAL/SECAM]

General

Item	Specifications
Power Supply	AC 100V ~ 240V, 50/60 Hz
Power Consumption (Max)	175W

RETURN TO THE CONTENTS

Dimension [W x H x D mm] With Stand Without Stand	 1530 x 778 x 405 mm 1530 x 732 x 59 mm
Weight With Stand Without Stand	 31 Kg 29 Kg

Environmental Condition

Item		Specifications
Temperature	Operational Storage	0 ~ 40°C -20 ~ 60°C
Humidity	Operational Storage	20 ~ 80% RH (No condensation) 5 ~ 95% RH (No condensation)
Pressure	Operational Storage / Shipment	800 ~ 1100 hPa (Altitude: 0 ~ 4,000 m) 700 ~ 1100 hPa (Altitude: 0 ~ 15,000 m)

Internal Speaker

Item	Specifications
Type	1 Way 1 Speaker
Input	12 W (RMS)
Impedance	8Ω
Output Sound Pressure	82 dB/W/M
Frequency Response	160 Hz ~ 13 KHz

RETURN TO THE CONTENTS

2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trade marks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V.

Specifications are subject to change without notice.

RETURN TO THE CONTENTS